



Air to water heat pumps

Installer/User Manual

Models

SHP290 6 kW	(4.74 kW @-2°C & 45°C flow temperature)
SHP290 9 kW	(8.23 kW @-2°C & 45°C flow temperature)
SHP290 12 kW	(9.15 kW @-2°C & 45°C flow temperature)
SHP290 15 kW	(13.01 kW @-2°C & 45°C flow temperature)
SHP290 18 kW	(13.61 kW @-2°C & 45°C flow temperature)



This manual has been created for informative purpose. The company declines any responsibility for the results of any projecting or any installation based on the explanations and/or on the technical specifications provided in this manual. It is besides forbidden the reproduction under any form of the texts of the figures contained in this manual. This manual is a translation from the official italian language version. For reasons of environmental respect the Company will not provide the hard copy in the original language which could be directly requested or downloaded from the Company website at any time. In case of any dispute, the original language manual will be the trusted one. Even partial reproduction PROHIBITED
© - EOGB Energy Products Ltd





01	03-2024	ALB	AR	GWP R90 update, minimum volumes and various corrections
00	01-2023	EG	AR	First issue
Rev	Date	Author	Approved	Note
Catalogo / Catalogue / Katalog / Catalogue				Serie / Series / Serie / Serie / Série
MUI02050120001_01				INVERTER AIR/WATER HEAT PUMPS WITH AXIAL FANS



Contents

1. PURPOSE AND CONTENTS OF THE MANUAL	6
1.1 HOW TO KEEP THE MANUAL	6
1.2 GRAPHIC SYMBOLS USED IN THE MANUAL	6
2. NORMATIVE REFERENCES.....	6
3. PERMITTED USE.....	7
4. GENERAL SAFETY REGULATIONS.....	7
4.1 WORKERS' HEALTH AND SAFETY.....	8
4.2 PERSONAL PROTECTIVE EQUIPMENT.....	9
4.3 SAFETY SIGNS.....	9
4.4 WARNING LABELS.....	10
4.5 REFRIGERANT SAFETY DATA SHEET	11
4.6 SPECIFIC R290 GAS WARNINGS.....	12
4.7 INDICATIONS FOR VACUUM AND CHARGE WITH R290 GAS.....	12
4.8 R290 GAS DISPOSAL	12
4.9 SAFETY RULES FOR R290 UNITS TRANSPORT AND STORAGE	12
5. INSTALLATION	13
5.1 GENERAL	13
5.2 TRANSPORT AND STORAGE TEMPERATURE LIMITS.....	14
5.3 LIFTING AND HANDLING.....	14
5.3.1 Lifting mode	15
5.3.2 Damage to the unit.....	15
5.4 POSITIONING AND MINIMUM TECHNICAL CLEARANCES.....	15
5.5 DANGER AND SAFETY ZONES	17
5.5.1 Free-field ground installation	18
5.5.2 Ground installation in front of a wall.....	18
5.5.3 Ground installation in a corner.....	19
5.5.4 Flat roof installation	20
5.5.5 Multiple installation	20
5.6 DIMENSIONS.....	20
5.6.1 Model SHP290 6 kW / 9 kW	20
5.6.2 Model SHP 290 12 kW / 15 kW / 18 kW.....	21
5.7 POSITIONING OF CENTRE OF GRAVITY AND VIBRATION DAMPERS	21
5.8 ACCESS TO THE INNER PART	23
5.8.1 Models SHP290 6 kW / 9 kW.....	23
5.8.2 Models SHP290 12 kW /15 kW / 18 kW	24
5.8.3 THERMOSTAT POSITION AND TEMPERATURE PROBE	25
5.9 MACHINE CHARGING PROCEDURE.....	26
5.10 PLUMBING CONNECTIONS	28
5.10.1 Characteristics of the circuit water.....	28
5.10.2 Typical plumbing diagram	29
5.10.3 Minimum water content and hydraulic circuit volumes.....	30
5.10.4 Handbook.....	30
5.10.5 Condensation discharge system	30
5.10.6 System load	31



5.10.7	System discharge	31
5.10.8	Deaerator	31
5.11	ANTI-LEGIONELLA FUNCTION	32
5.12	FUNCTIONAL DIAGRAMS	33
5.12.1	SHP290 6kW / 9kW	33
5.12.2	SHP290 12kW /15 kW/ 18kW.....	34
5.13	ELECTRICAL CONNECTIONS.....	35
5.13.1	Access to the electrical panel and user board.....	35
5.13.2	Power supply	37
5.13.3	Protection devices	37
5.13.4	User board.....	37
5.13.5	Smart Grid Ready	38
5.13.6	Control logics.....	39
5.13.7	Fuses.....	39
5.14	ENERGY COUNTER.....	39
5.14.1	Operation and necessary equipment (e-PRO).....	39
5.14.2	Data availability	39
5.15	EXTERNAL MODULE (GI3)	39
5.15.1	NET DIMENSIONS AND WITH PACKAGING	40
5.15.2	Technical data.....	40
5.15.3	Installation of the external kit (GI3)	40
6.	STARTUP	42
6.1	SWITCHING ON THE UNIT.....	42
7.	INSTRUCTIONS FOR THE USER	42
8.	SHUTDOWNS FOR LONG PERIODS.....	43
9.	MAINTENANCE AND PERIODIC CHECKS.....	43
9.1	CLEANING THE FINNED COIL	45
9.1.1	Cleaning the finned coils treated with the anti-corrosion method	45
9.2	CLEANING OF EXTERNAL SURFACES	45
9.3	EXTRAORDINARY MAINTENANCE	45
10.	DECOMMISSIONING.....	46
11.	RESIDUAL RISKS	46
12.	TECHNICAL DATA	50
12.1	TECHNICAL DATA SHEET UNIT	50
12.2	UNIT AND AUXILIARY ELECTRICAL DATA	52
13.	OPERATING LIMITS.....	52
13.1	EVAPORATOR WATER FLOW RATE.....	52
13.2	COOLING WATER PRODUCTION (SUMMER MODE).....	52
13.3	HEATING WATER PRODUCTION (WINTER MODE)	53
13.4	AMBIENT AIR TEMPERATURE AND SUMMERY TABLE	53
14.	TROUBLESHOOTING.....	55



The manual of the SHP290 units, contains all the necessary information for optimal use of the equipment under safe conditions for the operator.

1. PURPOSE AND CONTENTS OF THE MANUAL

This manual provides basic information as to the selection, installation, operation and maintenance of the SHP290 unit. It is intended for the operators of the appliance and it enables them to use the equipment efficiently, even if they do not have any previous specific knowledge.

	CAUTION: Although this manual is designed for the end user, some of the operations described are only be carried out by-qualified personnel who have completed technical or skilled manual training to perform this particular work. They must also keep themselves properly updated with courses recognised by the competent authorities. These tasks include: installation, routine and extraordinary maintenance, decommissioning of the appliance and any other operation indicated "by qualified personnel".
	When installation and/or maintenance operations are completed, the qualified operator must correctly inform the end user regarding the use and the necessary routine maintenance of the appliance.
	It is the responsibility of the operator to submitting all of the documentation necessary (including this manual) and of explaining that it all must be kept carefully, in the vicinity of the appliance and always available.

The manual describes the machine at the moment it was sold. It must therefore be considered adequate with respect to the state-of-the-art in terms of potentiality, ergonomics, safety and functionality.

The company also performs technological upgrades and does not consider itself obliged to update the manuals of previous machine versions which could even be incompatible. Please refer to the manual supplied with the unit installed.

It is recommended to follow the instructions contained in this manual, especially those concerning safety and routine maintenance.

1.1 HOW TO KEEP THE MANUAL

The manual must always be present with the machine to which it refers. It must be placed in a safe place, protected from dust, humidity and easily accessible to the operator, who must necessarily consult it in case of doubt about the use of the machine.

The company also makes technological improvements and is not obliged to update machine manuals of previous versions that may be incompatible. We also decline any responsibility for possible inaccuracies in the manual if due to printing or transcription errors.

Any updates that are sent to the customer must be kept as an annex to this manual.

For further detailed information regarding this manual and the unit's use and maintenance, you can contact Sapphire Heat Solutions.

1.2 GRAPHIC SYMBOLS USED IN THE MANUAL

	Indicates potentially hazardous situation for people and/or the proper functioning of the unit.
	Indicates prohibited operations.
	Indicates important information that the operator has to follow in order to guarantee the correct operation of the unit in complete safety.

2. NORMATIVE REFERENCES

The units SHP290 are designed in compliance with the following directives and harmonized standards on the safety of machinery:

- Community directives 2014/35/UE, 2014/30/UE, 2011/65/UE, 2012/19/UE, 2014/68/UE
- Norm EN 12735-1:2020, EN 12735-2:2016
- Norms IEC 60335-1:2010 + COR1:2010 + COR2:2011 + A1:2013 + A2:2016, IEC 60335-2-40:2018
- Norms EN IEC 55014-1:2021, EN IEC 55014-2:2021
- Norms ISO 5149-1:2014 + A1:2015 + A2:2021, ISO 5149-2:2014 + A1:2020, ISO 5149-3:2014 + A1:2021, ISO 5149-4:2022
- Norm EN 62233:2008 + AC:2008
- Norm EN IEC 63000:2018
- Norm EN 14276-1:2020, EN 14276-2:2020
- Norms EN ISO 13585:2012, UNI EN 13134:2001

And the following directives, regulations and standards on ecodesign and energy labelling:

- Community directive 2009/125/UE and subsequent transpositions
- Community directive 2010/30/UE and subsequent transpositions
- UE Regulation n.811/2013
- UE Regulation n.813/2013
- Norms EN 14511-1:2022, EN 14511-2:2022, EN 14511-3:2022, EN 14511-4:2022
- Norms EN 14825:2022
- Norm EN 12102:2022
- Norm UNI EN ISO 9614-1:2009



3. PERMITTED USE

- The company excludes any contractual and extra contractual liability for damage caused to persons, animals or objects, by incorrect installation, setting and maintenance, improper use of the equipment, and the partial or superficial reading of the information contained in this manual.
- These units are built for the heating and/or cooling of water and for outdoor use only in residential and commercial applications. A different application, not expressly authorised by the manufacturer, is considered improper and therefore not permitted. The fluid to be used is exclusively water or a mixture of water and glycol (in a concentration not exceeding 10%) in the case of low water temperatures.

	It is absolutely NOT permitted to connect the flow of heated water from the machine directly to the taps of the sanitary circuit. This fluid is not intended for sanitary use and must not be ingested.
--	--

- The location, hydraulic and electrical installation must be determined by the system designer and must take into consideration technical requirements, current local legislation and specific authorisations.

	All work must be carried out by experienced and qualified personnel, competent on the existing regulations in country where the installation takes place, as defined in IEC 60335-2-40 Annex HH. Personnel must also be aware of the physical properties and special hazards involved in handling R290 refrigerant gas, as well as the necessary equipment and protective devices. Each operator must have the qualification levels and overall competence defined in EN ISO 13313.
--	--

- This device is intended for use by experienced or trained users in shops, light industry and farms, or for commercial use by non-experts.
- The appliance may be used by children at least 8 years old and by persons with reduced physical, sensory or mental capabilities or without experience or the necessary knowledge as long as they are supervised or after they themselves have received instructions on the safe use of the appliance and understand the relevant dangers. Children must not play with the appliance. The cleaning and maintenance which the user is expected to carry out on the unit cannot be done by children without supervision.
- Direct interaction with the unit by persons with electrically controlled medical devices, such as pacemakers, is prohibited, as harmful interference may result. It is recommended that an adequate distance be maintained from the installation site of the unit, as indicated by the medical system used.

	Users of electrically controlled medical devices should exercise caution when interacting with the unit.
--	---

	Users of metallic prostheses should exercise caution when interacting with the unit.
--	---

4. GENERAL SAFETY REGULATIONS

Before starting any type of operation on the SHP290 units, the operator must have read the information contained in the manual in order to be familiar with the operation of the machine and its controls.

	WARNING: The machine operates with R290 refrigerant, which is a class A3 flammable refrigerant (according to ASHRAE 34 classification). In the event of a leak, the escape of refrigerant gas into the environment can lead to the formation of a flammable atmosphere. Do not smoke and do not use open flames or fires in the vicinity of the machine (see chapters 5.4 and 5.5 for specific warnings).
	DANGER: Risk of death or serious personal injury, observe the fire and explosion hazard information described in the manual.
	WARNING: Any routine or extraordinary maintenance operation must be carried out with the machine stopped and disconnected. Always check that there is no voltage: there is a risk of death by electrocution if you come into contact with live electrical parts.
	For installations in rooms that can reach outside temperatures below 0 °C, freezing of some components may occur if the unit is not in operation. Ensure that the heating system remains in operation at all times and that all rooms are sufficiently heated if there is a risk of frost. If operation cannot be guaranteed, have the heating system drained by a qualified technician.
	Do not insert your hands, screwdrivers, spanners or any other tools on moving parts.
The machine operator and maintenance personnel must receive suitable training for the performance of their tasks in safety.	
Operators must know how to use personal protective equipment and the accident-prevention rules of national and international laws and regulations.	



	It is strictly forbidden to remove and/or to tamper with any safety device.
	Children or unassisted disabled persons are not allowed to use the appliance.
	Do not touch the appliance when barefoot or parts of the body are wet or damp.
	It is forbidden to perform any cleaning operation when the master switch is 'ON'.
	It is forbidden to pull, detach or twist the appliance's electric cables, even if it is disconnected from the power supply.
	Do not step on, sit down on and/or place any type of object on the appliance.
	Do not spray or pour water directly on the unit.
	Do not dispose of, abandon or leave within reach of children packaging materials (cardboard, staples, plastic bags, etc.) as they may represent a hazard.

4.1 WORKERS' HEALTH AND SAFETY

The European Union has issued some directives concerning the safety and health of workers, including: 89/391/EEC, 89/686/EEC, 2009/104/EC, 86/188/EEC and 77/576/EEC and subsequent amendments which every employer is obliged to follow and have followed. We observe therefore that:

	It is forbidden to tamper with or replace parts of the machine without the express authorisation of the manufacturer. This intervention releases the manufacturer from any civil or criminal liability.
	The unit contains flammable refrigerant gas R290. Any refrigerant leakage can generate a flammable atmosphere. Always carry out a careful fire and explosion risk evaluation.
	Using components, consumables or spare parts that do not correspond to those recommended by the manufacturer and/or listed in this manual may be dangerous for the operators and/or damage the unit.
	Keep the operating place clean, tidy and free of objects that may limit free movement. It must be properly lighted. Insufficient or excessive lighting may cause risks.
	Ensure that adequate ventilation of the working areas is always guaranteed and that the suction systems are always operational, in good condition and in compliance with the laws in force.
	In the design phase, the indications contained in UNI EN ISO 14738 regarding workstations on the machinery were followed and the lifting limits imposed by UNI ISO 11228-1 were evaluated. Make sure to maintain, during the installation and maintenance of the unit, a posture that does not cause fatigue. Check the weight, before moving any component.

The unit works with R290 refrigerant, which is a refrigerant gas with a low greenhouse effect (GWP 0,02). It is a hydrocarbon with a low environmental impact and is not included in the list of fluorinated substances that comply with the requirements of EU Regulation No. 517/2014 called 'F-GAS' (mandatory in the European area).

The gaseous form of R290 refrigerant is heavier than air and if released into the environment, most of it tends to concentrate in poorly ventilated areas. Inhaling it can cause dizziness and sensations of suffocation and can develop lethal gas if in contact with naked flames or hot objects (see the refrigerant's safety data sheet to chapter 4.5).

Pay attention to the fact that refrigerant R290 can be odourless.

For any operation on the heat pump system:



	Wear the appropriate PPE (specifically gloves and goggles).
	Ensure that the operating area is well ventilated. Do not work in closed ambients or ditches with insufficient air circulation.
	Do not operate on the refrigerant in the vicinity of hot parts or naked flames.
	Check that there is no voltage and ensure that the unit cannot be reconnected to the power supply during operation.
	Avoid any leakage of refrigerant into the environment and pay particular attention to accidental leaks from pipes and/or fittings even after the system is emptied.
	Make sure that there is a fire extinguisher near the unit.

4.2 PERSONAL PROTECTIVE EQUIPMENT

Use the following personal protective equipment when operating and maintaining SHP290 units:

	Clothing: Maintenance technicians and operators must wear protective clothing that does not leave parts of the body uncovered, as during maintenance it is possible to come into contact with hot or sharp surfaces. Avoid clothes that can get caught or sucked into airflows. Use antistatic clothing (ESD).
	Wear safety shoes with non-slip soles, especially in ambient with slippery floor. Use antistatic footwear (ESD).
	Gloves: Protective gloves must be used during cleaning and maintenance. Wear antistatic gloves (ESD).
	Explosimeter for R290 gas: During maintenance operations, each operator must equip himself with an explosimeter for R290 refrigerant gas to check for its possible presence in the air. The explosimeter must not be a possible source of ignition and its sensitivity must be such that it signals an alarm when a concentration of 20% of the lower flammability limit (LFL) is reached. Do not carry electronic devices (e.g. mobile phones, computers, etc.) in the vicinity of the product before evaluating the possible presence of refrigerant in the environment.
	Mask and goggles: During cleaning operations, is necessary wear a respiratory protection (mask) and a eye protection (goggles).



Personal protective equipment must be checked periodically and comply with the refrigerant gas R290.

4.3 SAFETY SIGNS

Personnel must necessarily observe the following safety signs on the unit:





	Generic hazard.
	Dangerous electric voltage.
	Moving parts.
	Surfaces which can cause injuries.



	Boiling surfaces which can cause burns.
	Fire hazard.

4.4 WARNING LABELS

Warning labels with essential product safety information are applied in the external panels and in the internal parts of the units. The main symbols on the labels are the following:

	Flammable substance symbol (ISO 7010-W021).
	Read the warnings and technical instructions in the manual (ISO 7000-1659).
	Prohibition of open flames (ISO 7010-P003).
	Prohibition of smoking (ISO 7010-P002).

Note that the essential warning and safety symbols are also shown on the packaging of each unit.



4.5 REFRIGERANT SAFETY DATA SHEET

Name:	R290
HAZARDS IDENTIFICATION	
Main hazards:	Highly flammable gas. Vapours are heavier than air and can cause asphyxiation due to reduced oxygen levels.
Specific hazards:	Contact with the liquid can cause frost burns.
FIRST AID MEASURES	
General information:	In high concentrations it can cause asphyxia. Symptoms may include loss of mobility and/or consciousness. In low concentrations it may have a narcotic effect.
Inhalation:	Move the victim to an uncontaminated area while wearing self-contained breathing apparatus. Use oxygen or artificial respiration if necessary. Keep the patient lying down and warm. Call a doctor.
Eye contact:	Carefully rinse with plenty of water for at least 15 minutes.
Skin contact:	Wash immediately with plenty of water for at least 15 minutes. Immediately remove contaminated clothing.
FIRE FIGHTING MEASURES	
Extinguishing media:	Water spray, dry powder.
Specific hazards:	Exposure to flames may cause the vessel to rupture or explode.
Specific methods:	Cool down the containers with a water spray from a safe position. Stop the product leakage if possible. Use water spray, if possible, to abate the fumes. Move the vessels away from the area of the fire if this can be done without posing any risks.
ACCIDENTAL RELEASE MEASURES	
Personal precautions:	Try to stop the leak. Evacuate personnel to safety areas. Eliminate the ignition sources. Ensure proper ventilation. Avoid entering sewers, basements, excavations and areas where accumulation can be dangerous. Use personal protective equipment. Remain upwind.
Environmental precautions:	Try to stop the leak.
Cleaning methods:	Ventilate the area.
HANDLING AND STORAGE	
Handling: Technical measures/precautions:	Ensure sufficient air exchange and/or suction in the working area. Do not smoke. Keep away from sources of ignition (including electrostatic charges). Use only appropriate equipment, suitable for the product.
Advice for safe use:	Do not inhale the gas.
Storage:	Close carefully and store in a cool, and well ventilated area. Storage containers should be checked periodically. Do not store with other oxidants in general or other combustible substances. Containers must not be stored in conditions that could lead to corrosion. All electrical equipment in the storage area are compliant with the risk of explosive atmospheres formation.
EXPOSURE CONTROLS/PERSONAL PROTECTION	
Control parameters:	OEL: data not available. DNEL: data not available. PNEG: data not available.
Respiratory protection:	Filter masks can be used if the ambient conditions and duration of use are known.
Eye protection:	Safety goggles.
Hand protection:	Work gloves.
Hygienic measures:	No smoking.
PHYSICAL AND CHEMICAL PROPERTIES	
Colour:	Colourless.
Odour:	Odourless.
Boiling point:	-42,1 °C at atm press
Flash point:	470°C
Relative gas density (air=1)	1,50
Relative liquid density (water=1)	0,58
Solubility in water:	75 mg/l.
STABILITY AND REACTIVITY	
Stability:	Stable under normal conditions.
Materials to avoid: Decomposition products hazardous:	Air, oxidising agents . Keep away from heat sources/sparks/open flames/heated surfaces. Under normal conditions of storage and use, dangerous decomposition products should not be generated.
TOXICOLOGICAL INFORMATION	
Acute toxicity: Local effects: Long term toxicity:	CL50/inhalation/4 hours/on rat = 20000 ppm. No known effect. No known effect.
ENVIRONMENTAL INFORMATION	
Global warming potential GWP (R744=1):	0,02
Ozone Depletion Potential ODP (R11=1):	0
Disposal consideration:	Refer to the supplier's gas recovery programme. Avoid direct discharge into the atmosphere. Do not discharge where accumulation can be dangerous. Ensure that the emissions limits required by local regulations or specified in authorizations are not exceeded.



4.6 SPECIFIC R290 GAS WARNINGS

The R290 refrigerant gas:

- is odourless;
- is highly flammable (Class A3refrigerant), only if an ignition source is present;
- it may cause an explosion, but only if a given concentration in air is reached.

It is good practice to follow these guidelines:

- do not smoke near the unit;
- affix a no smoking sign near the unit;
- do not inhale the gas;
- install the unit in outdoor area respecting the required technical spaces and danger zones indicated in this manual;
- do not drill or burn the unit;
- do not place the unit near sources of ignition, such as open flames, electric heaters, switches for lights, sockets, lamps or other permanent ignition sources;
- any extraordinary maintenance or repair on the unit must be performed by technicians or qualified personnel, properly trained with specific skills in handling flammable refrigerant gases, comply with local laws;
- after installation of the machine and before carrying out any maintenance work, ensure, by means of a leak detection test, that no concentration of R290 gas can be measured in the danger zone.

4.7 INDICATIONS FOR VACUUM AND CHARGE WITH R290 GAS

Vacuum, charging and refrigerant gas recovery procedures may only be carried out by technicians or qualified personnel, who are adequately trained in the handling of flammable gases and comply with local laws. Follow the requirements below:

- Ensure that other types of refrigerant do not contaminate the R290 (the minimum purity of the refrigerant gas used for charging operations must be at least 99,5%);
- For refrigerant gas recovery, use cylinders with a left-hand connection and appropriate pitch. The maximum filling capacity must be 0,42 kg/L;
- Before charging the refrigerant gas, carry out three flushing cycles with pressurised nitrogen followed by a proper vacuum procedure;
- Keep the gas cylinder in a vertical position when filling;
- Apply the label on the appliance after loading;
- Wear work equipment suitable for operate with flammable gas (see Chapter 5.9 for more information). Always keep the work area well ventilated and equip yourself with detection devices for R290;
- Do not charge more refrigerant gas than necessary. It should be noted that the performance of SHP290 units is very sensitive to the amount of gas loaded, so a charging error can lead to malfunctions or even machine stoppages. It is recommended to charge the unit using calibrated scales with a reading sensitivity of at least a tenth of a gram;
- Once loading is complete, perform leak detection operations prior to function test;
- Perform a second leak check, once all the previous operations have been completed.

	ATTENTION: Each unit is equipped with two charging connections (high-pressure side and low-pressure side) to ensure charging and discharging of the refrigerant circuit. The maximum tightening torque of the charging connections is 0.5 Nm.
	ATTENTION: The unit is already charged with the refrigerant gas necessary for its correct operation. If it is necessary to recharge it, after a maintenance operation or after a leak, follow the procedures described in Chapter 5.9.
	ATTENTION: During the charging and recovery procedure of the unit, beware of possible refrigerant gas leaks that could start a fire. Always carry out a risk assessment and apply the necessary preventive actions.

4.8 R290 GAS DISPOSAL

The procedures described below may only be performed by skilled technicians or qualified personnel, adequately trained and with specific skills that comply with local laws:

- Do not discharge the gas in area where there is a risk of explosive mixtures forming with air. The gas should be disposed of in a suitable torch with a flashback arrestor. Follow current regulations regarding the disposal of refrigerant gases. Contact the supplier if operating instructions are considered necessary;
- Only use equipment approved for use with R290 refrigerant;
- When removing and disposing of the refrigerant, ensure that no air enters where the refrigerant is present (refrigerant circuit, cylinders or other containers for transporting the refrigerant).

	ATTENTION: During the refrigerant disposal procedure, beware of possible gas leaks that could start a fire.
--	--

4.9 SAFETY RULES FOR R290 UNITS TRANSPORT AND STORAGE

Before opening the unit's packaging, ensure there are no gas leaks in the environment with an appropriate gas detector. Check that there are no ignition sources near the unit.



No smoking near the unit.

Transport and storage must be performed in accordance with the national regulations in force. Specifically, according to ADR provisions, the total maximum quantity by transport unit in terms of net mass for flammable gases is 333 kg. In addition, for road transport, use vehicles that are preferably open or equipped with a ventilation system and operated by trained personnel.

For prerequisites on the transport by sea of equipment loaded with flammable refrigerant refer to the International Maritime Dangerous Goods Code (IMDG), and for transport by air check the regulations prescribed by the International Air Transport Organisation (IATA).

Please observe the following precautions:

- if storage is in a closed location, leave the machine in a dedicated place that is always dry, cool, well ventilated and protected from possible ignition sources, direct sunlight or other heat sources. It is also recommended to use one flammable gas detection sensor per 36-40 m². Always refer to national regulations;
- if storage is carried out in an open area, observe the minimum safety distances from drains, cisterns, sewers and other underground areas, in accordance with the national regulations in force;
- do not remove covers and packaging;
- ensure that all panels are correctly mounted;
- do not obstruct the openings and holes made in the machine panels;
- avoid cleaning the unit with aggressive detergents or chemicals;
- it is advisable to remove any heating water inside the unit to prevent possible corrosion or, in cold climates, damage to components caused by freezing.



CAUTION: When transporting and storing the unit, beware of possible refrigerant gas leaks that could start a fire.

5. INSTALLATION



CAUTION: All the operation described below must be done by **QUALIFIED PERSONNEL ONLY (IEC 60335-2-40 Annex HH)**. Before any operation on the unit, make sure that power supply is disconnected. When transporting and storing the unit, beware of possible refrigerant gas leaks that could start a fire.

5.1 GENERAL

When installing or working on the refrigeration circuit, it is necessary to scrupulously comply with the regulations in this manual, observe the instructions on the unit and in any case apply all necessary precautions. Failure to comply with the instructions may lead to dangerous situations.



After receiving the unit, immediately check its integrity. The unit left the factory in perfect condition; any damage must be immediately reported to the carrier and recorded on the Delivery Note before signing it.

The company must be informed, within 8 days, of the extent of the damage. The customer should prepare a written statement of any severe damage.



The units are designed to be installed outdoors. Under no circumstances should the outdoor ambient temperature exceed 46°C when the unit is not in operation. Above this value, the unit is no longer covered by current pressure equipment safety regulations.



The installation place must be without any fire risks. All necessary measures must therefore be taken to prevent the risk of fire at the installation site (see Chapter 5.5 for more details). The device must not be placed in the vicinity of open flames, ignition sources or heat sources. The wall of the buildings near the unit must have an adequate fire resistance class, in order to contain any fire that may develop inside the rooms. However, it is recommended to place a fire extinguisher near the unit.



The unit must be installed in order to allow maintenance and repair. The warranty does not cover costs for platforms or other lifting equipment needed for any interventions.



All the maintenance operations and tests must be done by **QUALIFIED PERSONNEL (IEC 60335-2-40 Annex HH)**. All equipment used during maintenance operations must be compatible with the refrigerant gas R290.



Before any operation on the unit, make sure that the power supply is disconnected and cannot be switched on again accidentally. After disconnecting the power supply from the unit, wait at least 5 minutes before performing any operation on the machine to allow the condenser to discharge.



Do not use equipment to speed up the defrost process or for cleaning except for those recommended by the manufacturer.



	The appliance must be placed outside, in a place without continuously operating ignition sources (e.g. open flames, an operating gas appliance or an operating electric heater). Refer to Chapter 5.5.
	Cable ducts and electrical conduits to the machine must not contain potential ignition sources.
	Do not perforate or burn. Do not make mechanical modifications to the unit.
	There are some moving parts inside the unit. Use extreme caution when working near them, even if the power supply is disconnected. In particular, pay attention to the fan blades when removing the front protective grilles. Do not touch or insert any objects into the moving parts.
	The compressor heads and discharge pipework are at quite high temperatures. The pipes on the suction side of the compressor, on the other hand, can reach very low temperatures. Uninsulated pipes can cause burns or freezer burns: only handle these components when their temperature is close to ambient.
	Be particularly careful when working near batteries. Aluminium fins are very sharp and can cause serious injury.
	After the maintenance operations, close the panels by fixing them with screws.
	After maintenance or replacement of components, reconnect the cables in the same position as in the factory.
	Routine maintenance operations can be carried out with the machine charged, while in the case of extraordinary operations, repairs or replacement of components and heavy work in the vicinity of the machine (e.g. construction sites), drain the machine of coolant gas and move it to a safe area if necessary (in accordance with Chapter 5.5).
	Insulating materials are not self-extinguishing: remove them when working on the unit, if necessary.
	Do not remove, replace or make illegible the adhesive labels on the unit and packaging. Do not cover the labels after installation of the unit.

5.2 TRANSPORT AND STORAGE TEMPERATURE LIMITS

Minimum storage temperature [°C]	-10 °C
Maximum storage temperature [°C]	+50 °C

5.3 LIFTING AND HANDLING

The handling must be performed by qualified personnel, properly equipped with appropriate tools to the weight and the encumbrance of the unit, in compliance with safety regulations of accident preventing.
It is recommended:

1. check the weight on unit technical label or on table of technical data;
2. check moving the unit there are no disconnected paths, ramps, steps, doors that could affect the movement and damage the unit;
3. check that the unit remains horizontal when moving;
4. during handling, do not carry out abrupt and sudden manoeuvres in order to not destabilise the unit;
5. before handling the unit, check that the equipment is suitable for lifting and preserving the integrity of the unit;
6. perform lifting only by one of the listed procedures;
7. before starting handling make sure, the unit is in stable equilibrium.

Note that the weight of the unit is concentrated more on the side of the refrigeration circuit: take into consideration the weight distribution of the machine when transporting it manually with ropes, in order not to lift excessive loads and avoid damage or personal injury.
It is recommended to remove the packaging only after the machine has been placed in the actual installation location. Dispose of the different packaging materials in accordance with national regulations.



	Before commissioning, carefully inspect the unit and packaging for damage or refrigerant leakage.
	Do not proceed with the start-up of the unit if damage was found during transport. Immediately inform the Company of the problem. The company is not liable for any damage to the product caused by handling and transporting the unit in a manner not in accordance with this manual and the regulations in force.

5.3.1 Lifting mode

Following lifting modes are allowed:

- forklift truck;
- ropes / bands.

Make sure to tension the lifting ropes gradually and check their correct positioning.

	Lifting through forklift truck.
	Lifting with ropes / bands.

5.3.2 Damage to the unit

In the event that the product is damaged during handling, storage or transport (e.g. due to dropping), follow the procedure described below:

1. take the damaged unit outside.
2. enclose a zone of at least 3 m around the unit, within which there must be no manholes, culverts, depressions or other connections to underground areas.
3. ensure that there is no source of ignition from the newly defined work area.
4. check for possible refrigerant leaks using a leak detector.
5. if necessary, remove the product packaging.
6. drain the refrigerant gas as described in chapter 5.9.

For further clarification, contact a technical service centre.

5.4 POSITIONING AND MINIMUM TECHNICAL CLEARANCES

All models of SHP290 are designed and constructed for outdoor installations. The company is not liable for any damage to property, animals and/ or persons resulting from failure to comply with the instructions on installing the unit described in this manual.


It is advisable to create an adequately sized support base for the unit. The units transmit a small amount of vibrations to the ground: however, it is advisable to place anti-vibration mounts between the base frame and the supporting surface. It is preferable to install the unit away from places sensitive to noise and vibration (e.g. windows and glass panes).

Always make an environmental impact assessment based on the power and sound pressure data in chapter "12. TECHNICAL DATA" and the sound emission limits according to the installation area of the unit, with reference to the DPCM of 14/11/1997. An assessment must also be made if the unit is installed near workers, according to D. LGS. 81/2008 Art. 189 and following. To reduce vibrations and noise, the use of rubber seals is recommended for wall installation.



	In case of hanging installation, it is necessary to make sure that the wall has been made with solid bricks, concrete or similar. The wall capacity needs to be enough to support at least four times the weight of the unit. The maximum installation height is 800 mm.
	The support plane must have enough capacity to support the unit weight, which can be checked both on the technical label on the unit and on this technical manual under "Technical data" chapter. The support plane must not be inclined to ensure the unit works properly and avoid a possible overturning. The support plane must not be smooth, to avoid water/ice deposit as potential sources of danger.
	Unit installation place must be free from foliage, dust, etc., which could clog or cover the coil. Installation in areas subject to water stagnation or fall, for example from gutters, should be avoided. Also, avoid areas subject to snow accumulation (such as corners of buildings with sloping roofs). In case of installation in areas subject to snowfall, it is advisable to place the unit on a base raised from the ground by 20-30 cm, to prevent the formation of snow accumulations around the machine, which can obstruct the battery and the perforations on the side panels and base of the machine. Also avoid positioning near lightning towers or other objects that can attract an electric shock.
	It is recommended that sufficient air exchange be ensured to dilute R290 gas in the event of its accidental escape, thus preventing the formation of explosive atmospheres. For this reason, a minimum distance (depending on the unit) must be maintained from any openings or manholes, in which the gas could accumulate. Respect national regulations for the installation of the machine.
	The units are suitable for installation in urban, industrial, coastal and rural areas. If the unit is installed in an environment with aggressive atmospheres, the air sucked in by the fan may contain substances that can cause damage to the panels, grilles and internal components of the unit. In this case, the operating life of the unit will be limited.
	It is prohibited to install the unit under roofs of any kind, such as roofs, canopies and similar, placed at a height of less than 1.5 m from the unit cover.
	It is prohibited to install the unit in a location below ground level (such as cellars, underground car parks, basement or underground work rooms, etc.).

It is very important to avoid recirculation between intake and delivery air, so as not to downgrade performance of the unit or even to interrupt its normal operation. This is why the minimum clearances shown below must be strictly guaranteed.

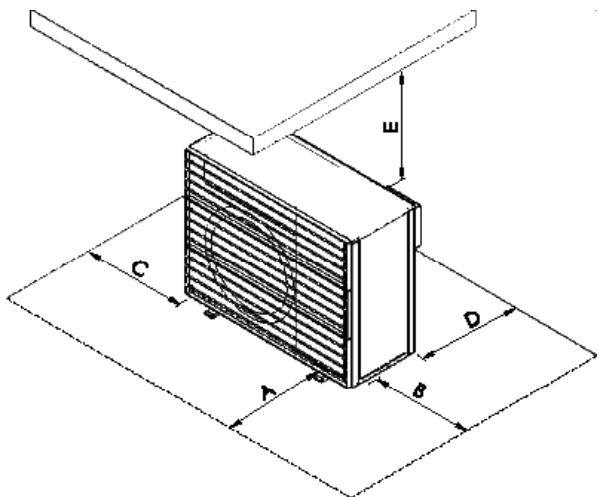

MODEL SHP290		A	B	C	D	E
6kW	mm	1500	500	400	300	1500
9kW	mm	1500	500	400	300	1500
12kW	mm	1500	500	400	300	1500
15kW	mm	1500	500	400	300	1500
18kW	mm	1500	500	400	300	1500

	Obstruction or covering of ventilation openings on the top cover must be avoided.
	For strong wind installation place refer to the classification of the area according to the Beaufort table. If the value is > 7 (strong wind, average wind speed = 13, 9-17, 1 m/s) it is strictly necessary to keep the fan always powered, thus preventing involuntary rotation of the same.
	If the unit is installed at a distance of less than 1 km from coastal and maritime areas, the presence of salt and sand in the air greatly increases the likelihood of corrosion. Install the unit so that it is protected from direct sea wind if necessary, provide windbreaks on site (observing the minimum distances indicated).



<p>In the event of side-by-side units, the minimum L_{min} distance between them is 1 m</p>	
<p>Covering with canopies or placing near plants or walls should be avoided to prevent air recirculation.</p>	
<p>In the event of winds stronger than 2.2 m/s the use of wind barriers is recommended.</p>	

5.5 DANGER AND SAFETY ZONES

The SHP290 series units contain R290 refrigerant gas. The density of this gas is greater than that of air, so in the event of leakage it tends to disperse and stratify, accumulating in niches, depressions in the ground or underground regions.

It is mandatory to comply with the danger and safety zones given in this manual, when installing the units. These zones have been designed in accordance with EN 60079-10-1, estimating an appropriate refrigerant loss, in order to guarantee the safety of the units in the installation area. A danger zone is defined as a area around the machine in which, in the event of a leakage of refrigerant gas, a flammable atmosphere is formed for a short time, within which it is necessary to implement all the precautions described in the manual. In the absence of specific standards or regulations, when using the unit in an industrial or working environment, it is advisable to carry out the classification of places with explosion hazards considering the ATEX Directive 1999/92 (Directive 89/391). There must NOT be any sources of ignition in the danger zones, including:

- flammable gases and sprays, self-igniting powders;
- electrical equipment that is not suitable for use in potentially explosive areas (zone 2 according to Directive 89/391);
- naked flames, heated surfaces (maximum surface temperature of 360°C) and processing by heat; smoking is prohibited, even for electronic cigarettes;
- sparks, electrostatic charges, direct and indirect lightning effects, eddy currents and cathodic protection;
- ignition sources due to remote processes (ionising and non-ionising radiation);
- permanent electrical sources (switches, lamps, etc.) or other possible triggers;

In addition, danger zone must NOT:

- include potentially dangerous areas or elements such as wells, manholes, openings to the sewage system and other openings to underground places and premises (e.g. garages), river drains, power lines, flammable deposits, electrical installations, etc.;
- include doors, windows or glass panes, to prevent the possible return of the gas inside the building;
- extend towards neighbouring residential properties, parking areas, public access sites, roads or railways.



A safety zone extending beyond the danger zone must also be identified. Within the safety zone, in the event of a refrigerant leak, the concentration of the gas in the air is typically below the critical levels for the formation of flammable or hazardous atmospheres. Compliance with the following provisions remains mandatory:

- prevent accumulation and stagnation in underground spaces, drains, manholes, cellars, etc.;
- do not place building vents inside or near the safety zone;
- do not use naked flames and other direct heat sources.

In any case, comply with national and local regulations for the installation of machinery (as applicable) in order to prevent the formation of fire hazards and to prevent gases from seeping underground into openings to the ground or floors below.



No structural modifications may be made in the danger and safety zones that would alter their extent or change the behaviour of the air-coolant mixture.

It is also strictly forbidden to tamper with, alter, remove or compromise, even partially, the functionality of the devices, guards and prescriptions provided for the safety of property and persons.

In this manual, different types of outdoor installation are considered, as indicated in the following paragraphs.

5.5.1 Free-field ground installation


For unit installed in open field terrain, the danger (continuous red line) and safety zones (dashed black line) are shown in the figures below:

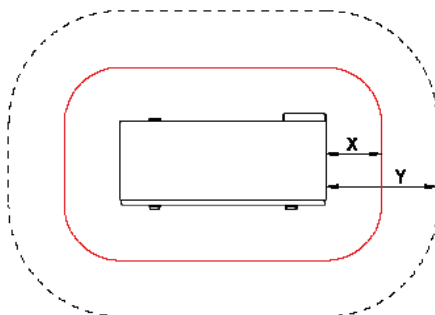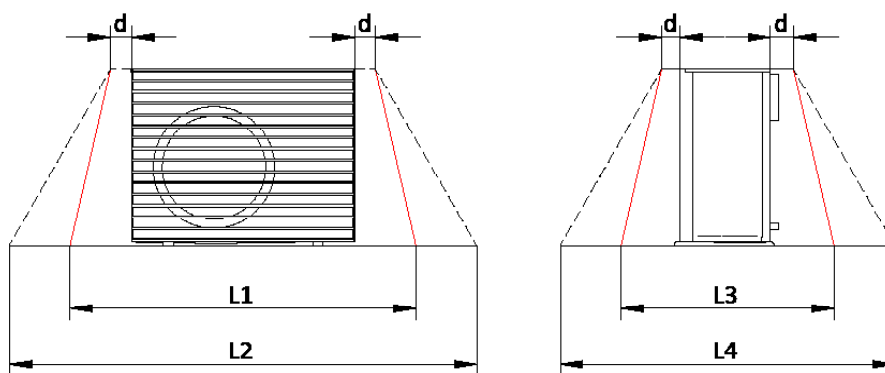

MODEL SHP290		X	Y	L1	L2	L3	L4	d
6 kW / 9 kW	mm	1000	1500	3105	4105	2490	3490	250
12 kW / 15 kW / 18 kW	mm	1500	2000	4105	5105	3490	4490	250

5.5.2 Ground installation in front of a wall


In the case of units installed on the ground in front of a wall, the danger (continuous red line) and safety zones (dashed black line) are shown in the figures below:

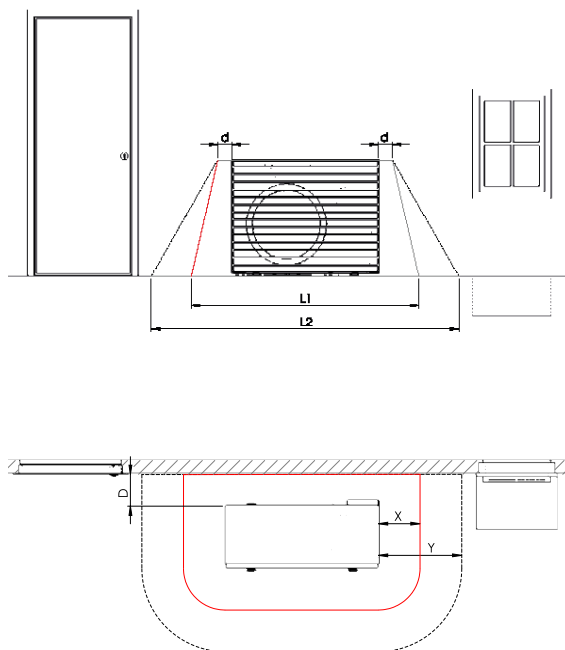

MODEL SHP290		X	Y	L1	L2	D	d
6 kW / 9 kW	mm	1000	1500	3105	4105	400	250
12 kW / 15 kW / 18 kW	mm	1500	2000	4105	5105	400	250

5.5.3 Ground installation in a corner

For units installed on ground in a corner, the danger (continuous red line) and safety zones (dashed black line) are shown in the figures below:

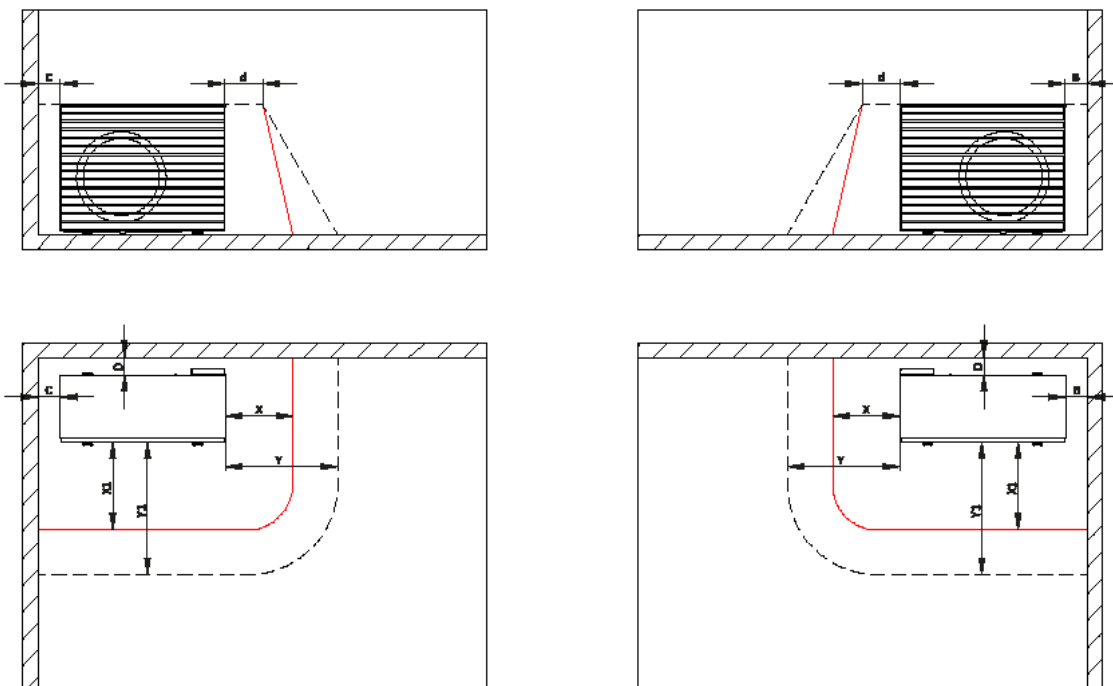



MODEL SHP290		X	Y	X1	Y1	B	C	D	d
6 kW / 9 kW	mm	1000	1500	2000	2500	500	400	400	250
12 kW / 15 kW / 18 kW	mm	1500	2000	2750	3250	500	400	400	250


5.5.4 Flat roof installation

The installation configuration on a flat roof is similar to that on a free-field ground, although some additional aspects must be considered:

- place the machine at a sufficient distance from side walls and protrusions, which must therefore be beyond the safety zone;
- ensure that the roof structure of the building is solid;
- choose a location where no accumulations of snow, dust or foliage can form;
- pay attention to noise emissions and maintain an adequate distance from surrounding buildings;
- if high air velocities are detected, install the protections listed in the previous chapter.

5.5.5 Multiple installation

When installing several machines side by side, follow the above configurations, maintaining a respect distance of L between each machine. As an example, see the following respect zones (danger and safety) for the case of a generic number "n" of units installed on open field terrain:

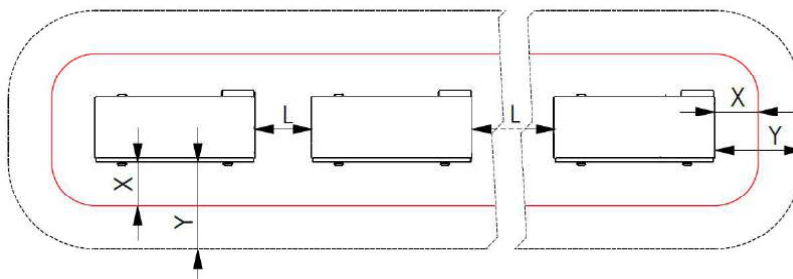

MODEL SHP290		X	Y	L
6 kW / 9 kW	mm	1000	1500	1000
12 kW / 15 kW / 18 kW	mm	1500	2000	1000


For other types of installation not covered in this manual, contact technical support. If in doubt about the installation of the units, request a technical assessment by the fire brigade or a fire prevention expert.

5.6 DIMENSIONS

5.6.1 Model SHP290 6 kW / 9 kW


IN/OUT: 1" G

E: power supply input.

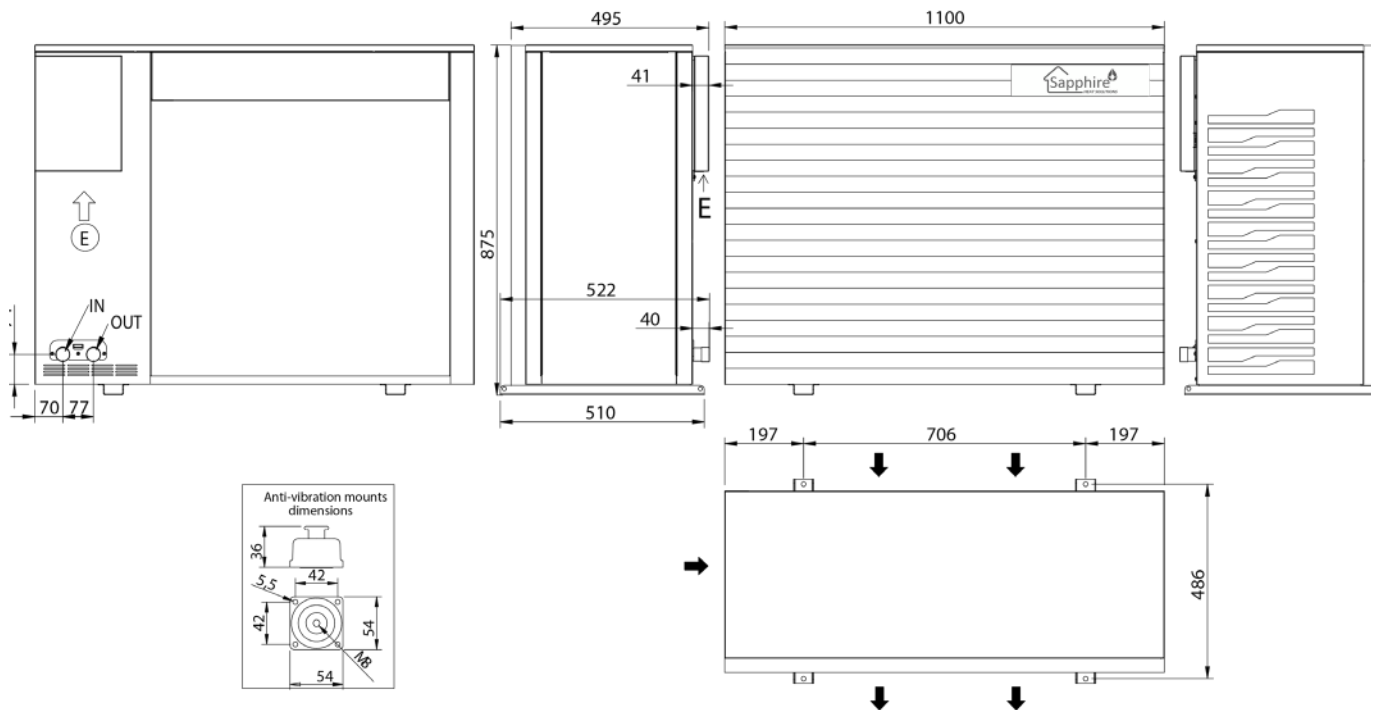


5.6.2 Model SHP 12 kW / 15 kW / 18 kW

IN/OUT: 1" G
 E: power supply input.

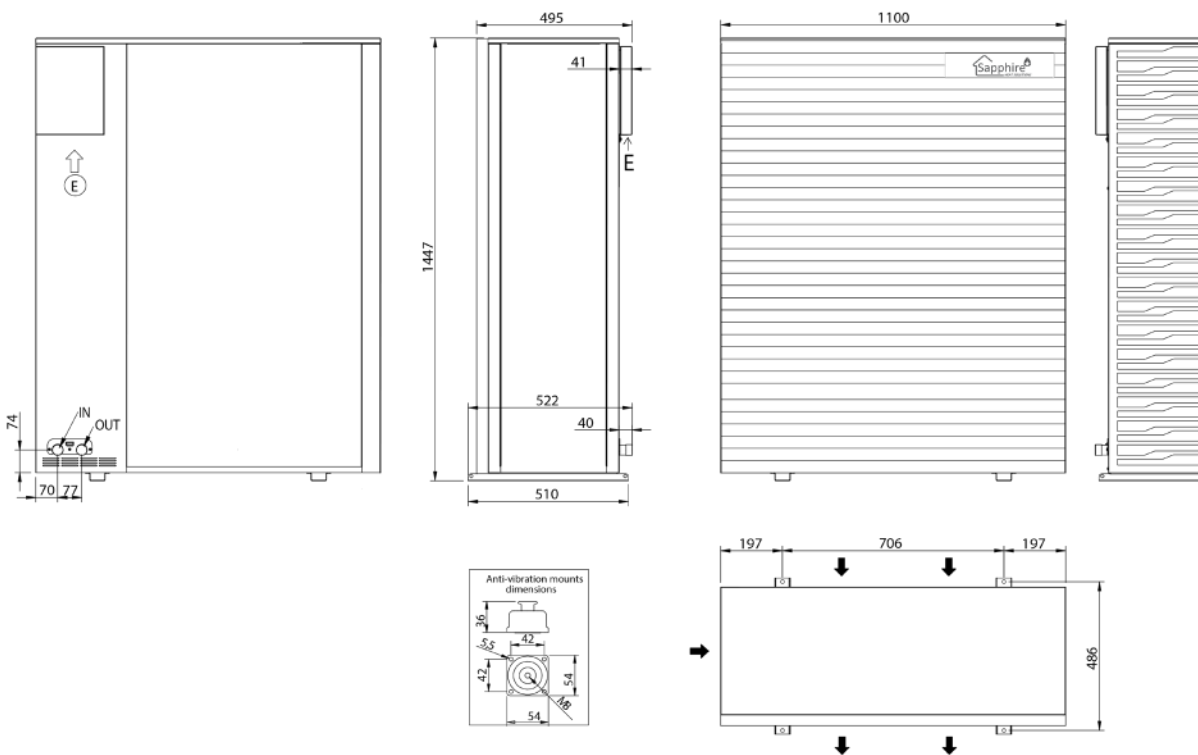


5.7 POSITIONING OF CENTRE OF GRAVITY AND VIBRATION DAMPERS

The position of the centre of gravity of each machine is indicated in the tables, with reference to the dimensions shown in the image.

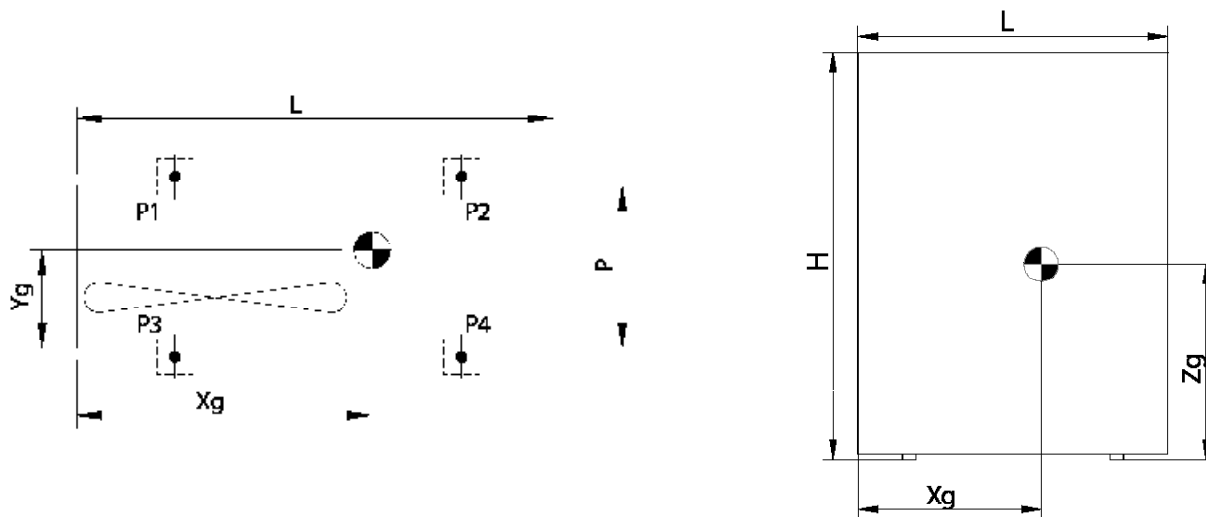

Model SHP290	Shipping weight [kg]	Operating weight [kg]	L [mm]	P [mm]	H [mm]	Xg [mm]	Yg [mm]	Zg [mm]
6 kW	117	103	1100	510	875	594	240	345
9 kW	119	105	1100	510	875	584	238	350
12 kW	170	156	1100	510	1447	710	180	665
15 kW	188	174	1100	510	1447	715	185	665
18 kW	188	174	1100	510	1447	715	185	665

The positions for the installation of vibration dampers for each type of machine are shown in the following pictures.

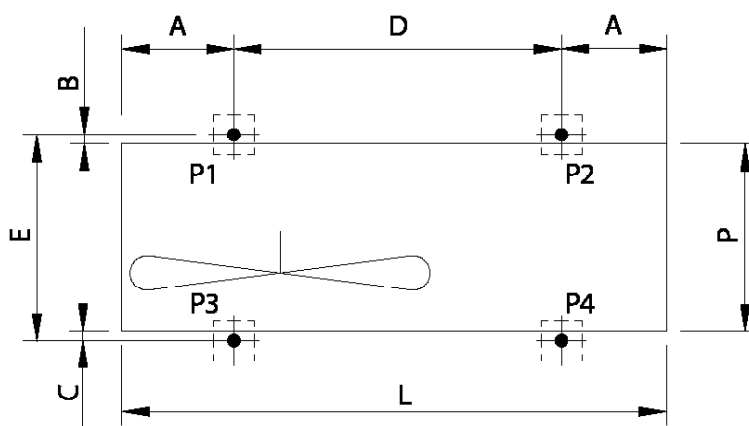

Model SHP290	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]
6 kW / 9 kW / 12 kW / 15 kW / 18 kW	197	16	16	706	486



5.8 ACCESS TO THE INNER PART




All access to internal parts and the electrical board must be carried out strictly with the machine switched off and disconnected from the power supply. Operations to be performed by qualified personnel.




When the work is complete, replace all the removed covers with all the screws and seals provided (if any).

5.8.1 Models SHP290 6 kW / 9 kW

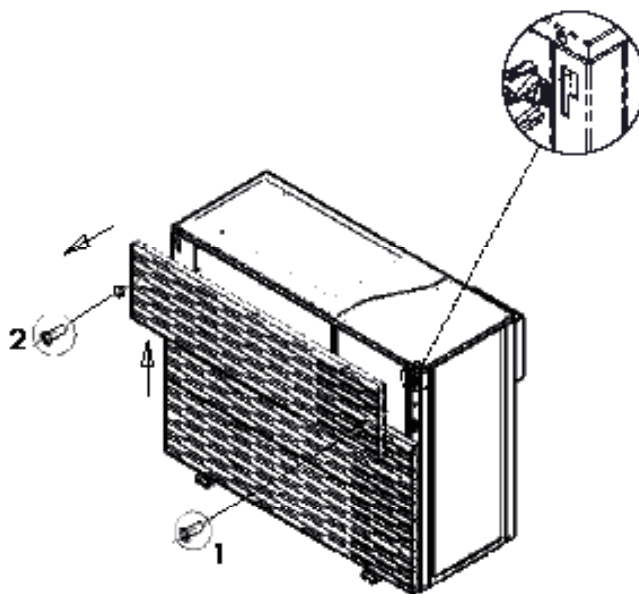

Removal of plastic grille:

1. Unscrew the M5 screws (number 1, 2) using a cross screwdriver.
2. Slide the grille upwards to pull out the interlocking tabs (as shown in detail).
3. Pull the grille out.
4. Repeat the steps described for the other two grilles.

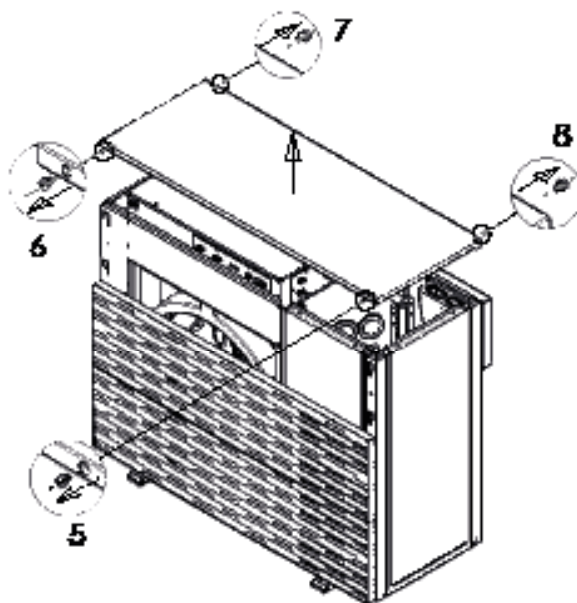


Removal of cover and side panel:

1. Unscrew the M4 screws (number 5, 6, 7, 8) using a cross screwdriver.
2. Remove the sheet by pulling it upwards.
3. Unscrew the M4 screws on the panel with a cross screwdriver and pull it upwards in order to release the attachment tabs.
4. Pull the panels forward to remove them.




5.8.2 Models SHP290 12 kW / 15 kW / 18 kW

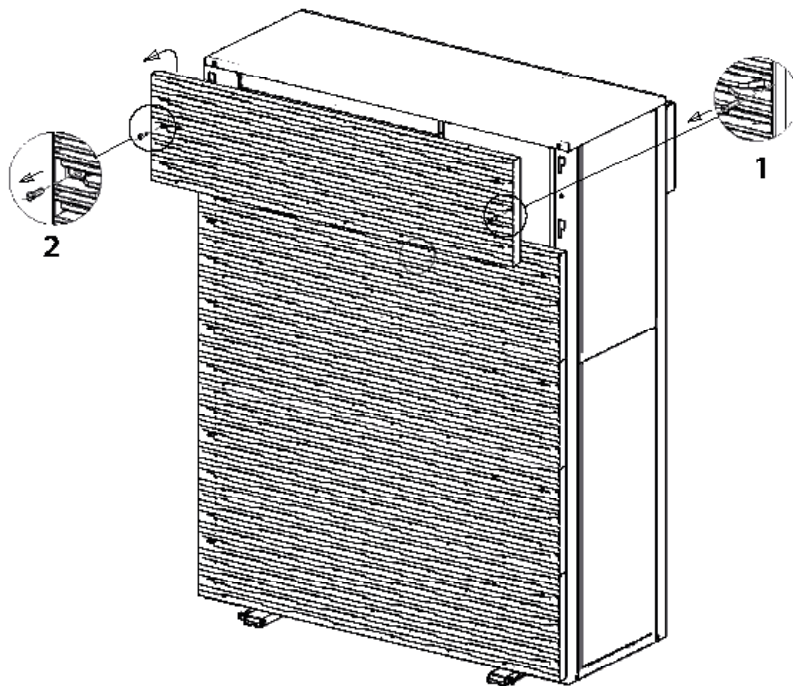


Removal of plastic grille:

1. Unscrew the M5 screws (number 1, 2) using a cross screwdriver.
2. Slide the grille upwards to remove the interlocking tabs.
3. Pull the grille out.
4. Repeat the operations described also for the other grids.

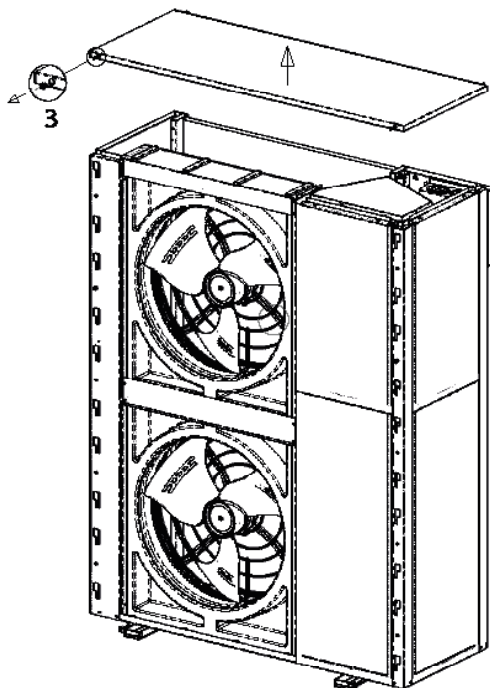


Removal of cover:

1. Unscrew the M4 screws of the cover (point 3) using a cross screwdriver.
2. Remove the cover by pulling it upwards.

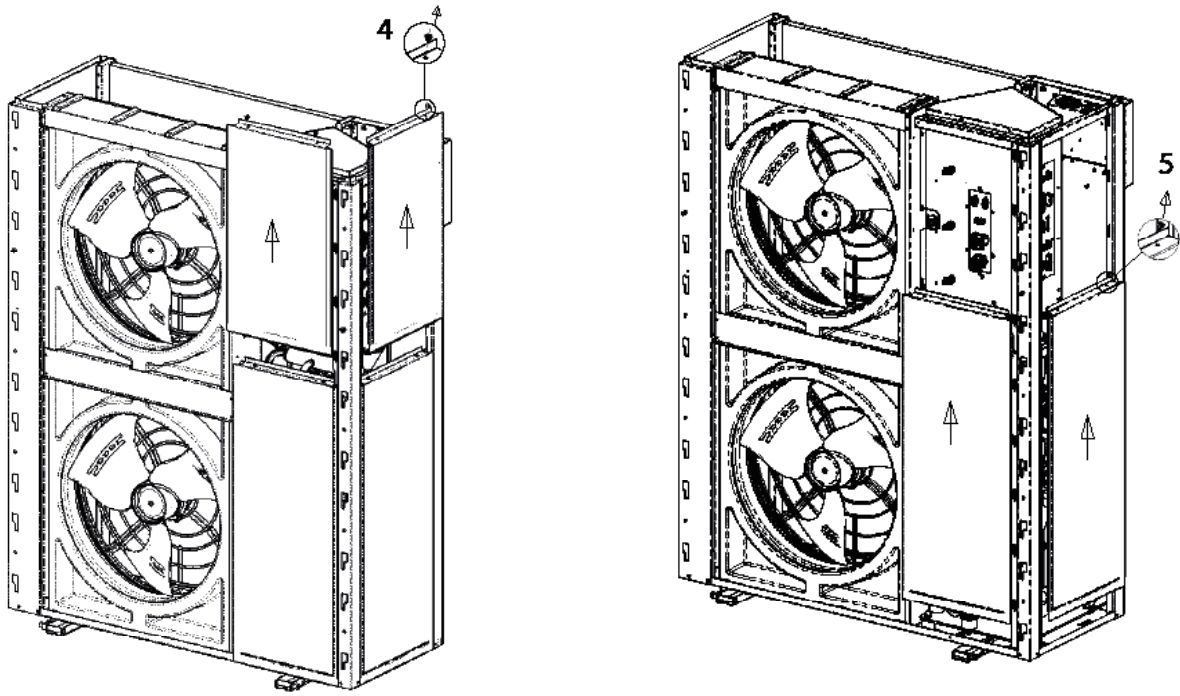

Removal of side panels:

1. Unscrew the M4 screws (points 4, 5) using a cross screwdriver.
2. Slide the grille upwards to remove the interlocking tabs.
3. Pull the panels forward to remove them.

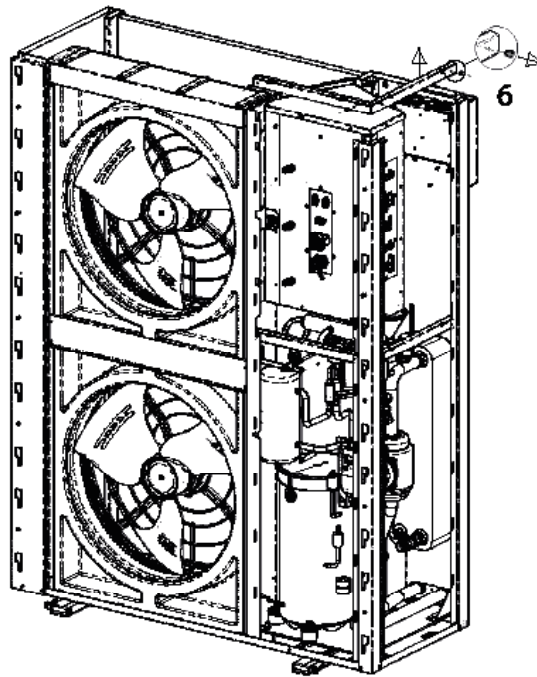


Removing corners:




1. Unscrew the M4 screw (number 6) using a cross screwdriver.
2. Release the angle bracket and pull it upwards to remove it.

5.8.3 THERMOSTAT POSITION AND TEMPERATURE PROBE

The safety thermostat is located on the compressor head (position A in the figure). To access it, remove the insulation of the component.

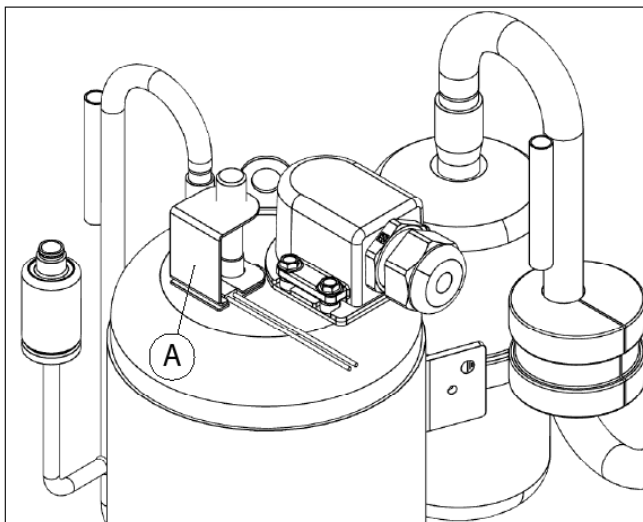

There are 5 temperature sensor inside the machine: the return and delivery probes on the water side (position B, C) and those on the compressor suction and discharge (position D, E) are located in dedicated wells, while the external air probe (position F) is located on a dedicated support. The probes on the compressor pipes are fixed by clips to the respective thermowells.

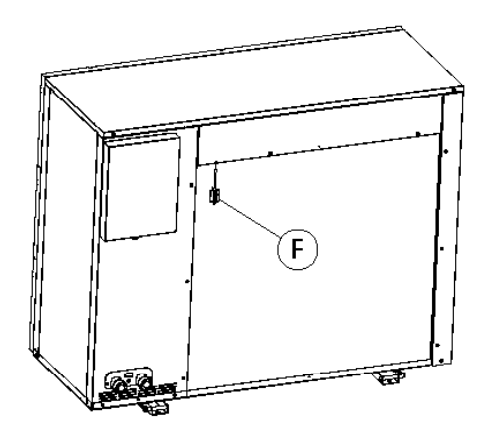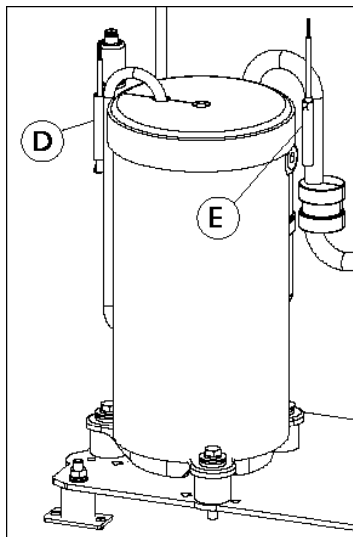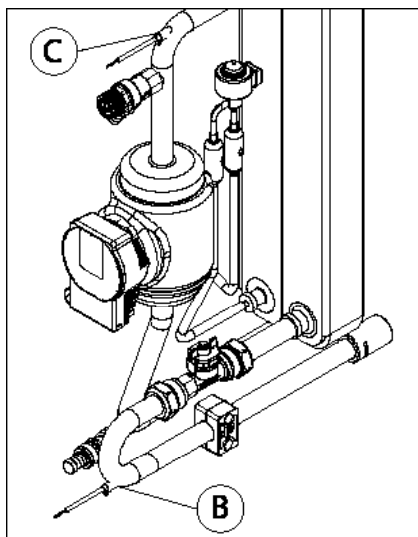

5.9 MACHINE CHARGING PROCEDURE


The unit is supplied already charged with refrigerant gas. If it is necessary to recharge it, after a maintenance operation or after a leak, follow the step listed below in this exact order:

- Before proceeding with any work, carry out a risk analysis and demarcate the work area. Ensure that no possible source of ignition is present in it. The minimum space should be 3 m around the unit and must not include manholes, drains or other depressions where refrigerant gas could be deposited;
- display warning signs and prevent access by unauthorised personnel;
- use the PPE indicated in this manual and the appropriate personal equipment for the intervention. This equipment includes:
 1. Explosimeter, to check for the presence of hydrocarbons in the environment (to be used before and while working on the system).





2. Appropriate hoses for the type of compressor oil.
 3. Approved non-sparking equipment.
 4. Non-sparking sockets.
 5. Antistatic (ESD) footwear and clothing.
 6. ATEX torch.
 7. Fittings for minimum emissions.
 8. Pin extractor.
 9. CO₂ extinguisher.
- Connect to the charging socket (position A,B and C,D,E in the following picture) of the circuit with a hose and recover the refrigerant gas completely. Use a suitable recovery machine (ATEX). In order not to contaminate the recovery gas, reclaim the equipment by vacuuming the hoses and the recuperator. Frequently check the condition of seals and filters. It is recommended to remove the pin using a pin extractor to considerably reduce the vacuum and charging time of the system;

SHP290 6 kW / 9 kW

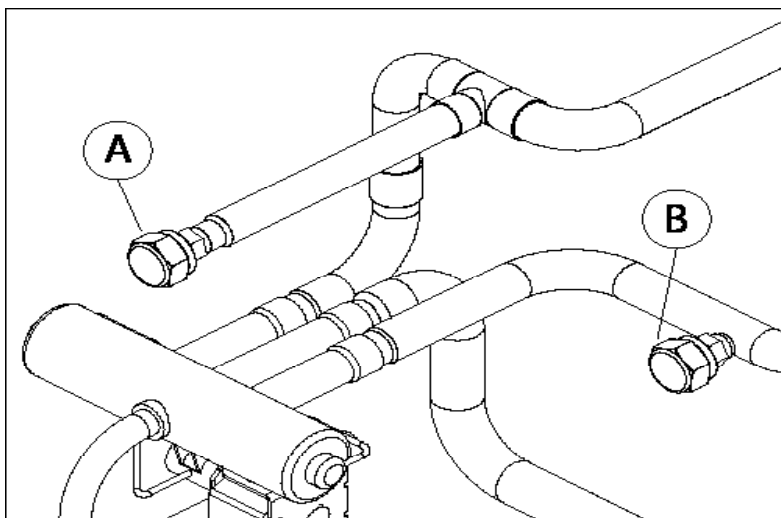

SHP290 12 kW / 15 kW / 18 kW

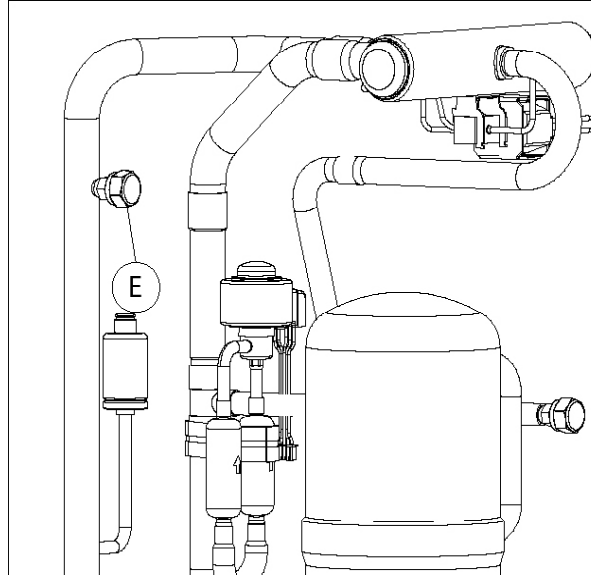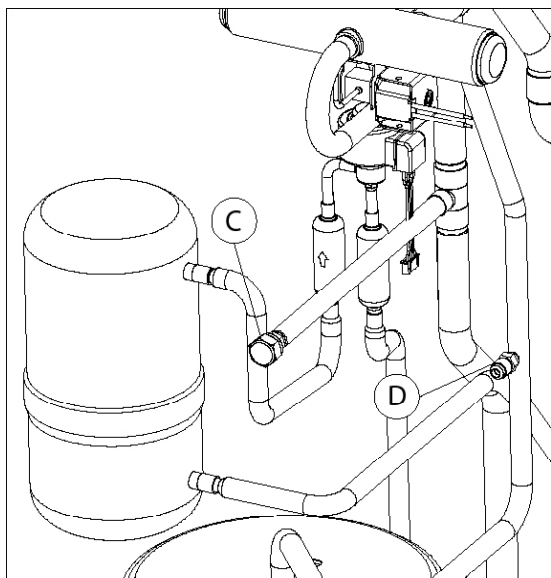

CAUTION: Always use new charging connections for maintenance and charging/discharging of units.

- flush the circuit by introducing nitrogen and bringing the pressure up to 4-5 bar. Expel nitrogen from the unit away from heat sources, ignition points, wells and other possible stagnation points;
- vacuum the system to an absolute pressure value of no more than 200 Pa. At this stage, use a fan (ATEX) to avoid refrigerant gas stagnation in the working area. Take care to direct the air flow to an area without sources of ignition;
- complete this wash and vacuum cycle at least three times;
- create a high vacuum in the circuit. The vacuum cycle must include an evacuation phase followed by an ascension phase, in which the system is allowed to reach an equilibrium condition. The absolute pressure at the end of this process must not exceed 150 Pa. To ensure the best performance of the machine, the vacuum process must be carried out with care and precision;
- before carrying out the vacuum, make sure that the oil in the pump used to create the vacuum is clear and free of bubbles, in order to pre-



- vent non-condensable gases or other particles from entering the system circuit. Use an ATEX vacuum pump;
- connect to the circuit charging socket with a hose and charge the refrigerant gas carefully and slowly. Shall not exceed the gas charged specified in the data sheet. Use calibrated scales (ATEX) with a reading sensitivity of at least a tenth of a gram. If available, the use of heating covers for cylinders is also recommended in order to speed up the filling phase of the circuit;
- once the desired charge has been completed, remember to insert the pin into the charging socket again and disconnect the equipment used;
- ensure the tightness of the system by monitoring for refrigerant gas leaks with a suitable detector.

Failure to comply with the rules set out in this manual may result in:

- malfunctions and loss of machine performance;
- leakage of refrigerant gas, with possible formation of an explosion hazard zone;
- damage to components or piping (e.g. freezing).

	ATTENTION: All loading/unloading operations of the machine must be carried out by QUALIFIED PERSONNEL (IEC 60335-2-40 Annex HH).
	ATTENTION: During loading/unloading operations, there is always a risk of refrigerant gas leakage and thus the formation of flammable atmospheres. Take the utmost care to ensure that no refrigerant gas is present in the environment before and during each operation.

5.10 PLUMBING CONNECTIONS

The plumbing connections must be made in accordance with national and/or local regulations; pipes can be made of steel, galvanised steel, multilayer steel or PVC. Pipes must be accurately sized according to the maximum water flow rate of the unit and the pressure drops of the water circuit. All pipes must be insulated with closed-cell material of adequate thickness. The chiller must be connected to the pipes using new flexible joints, not reused ones. The water circuit should include the following components.

- Well thermometers to monitor the circuit's temperature.
- Manual gate valves to isolate the chiller from the water circuit.
- Metal Y filter or a dirt separator (installed on the return pipe) with metal mesh no larger than 1 mm.
- Loading group and exhaust valve where necessary.

	When sizing the pipes, make sure not to exceed the maximum pressure drop on system side reported in the technical data table in Chapter 12 (see useful head).
	Connect the pipes to their fittings always using the key-to-key method.
	Create a suitable drain for the safety valve.
	CAUTION: The responsibility to verify that the expansion tank is suitable for the real capacity of the installation lies with the installer.
	CAUTION: Place the return pipe from the system at the 'WATER INPUT' label, otherwise the evaporator may freeze.
	CAUTION: It is mandatory to install a metal filter (with mesh no larger than 1 mm on the return pipe from the system labelled "WATER INLET". Alternatively, it is possible to install a dirt separator that guarantees a filtration degree of no more than 1 mm; in this case is not necessary to install the Y-filter. If the flowmeter is tampered with or altered, or if the metal filter or the dirt separator are not present on the system, the warranty shall expire. The filter (or the dirt separator) must be kept clean, therefore, after installing the unit, you must make sure that they are still clean and check them regularly.
	CAUTION: All the units leave the company supplied with flowmeter (installed in factory). If the flowmeter is altered or removed or if the water filter and dirt separator are missing from the unit, the guarantee will be void. Refer to the wiring diagram attached to the unit to connect the flow meter. Never jumper connections of the flowmeter in the terminal block.
	The heating system and the safety valves must comply with the requirements of standard EN 12828.

5.10.1 Characteristics of the circuit water

To guarantee correct operation of the unit, the water must be appropriately filtered (see the instructions at the start of this paragraph) and there must be only a minimum amount of dissolved substances. The maximum allowed values are shown below:

MAXIMUM CHEMICAL-PHYSICAL PROPERTIES ALLOWED FOR THE CIRCUIT WATER		
PH		7,5 - 9
Electrical conductivity		100 - 500 µS/cm
Total hardness		4,5 – 8,5 dH
Temperature		< 75°C
Oxygen content		< 0,1 ppm
Max glycol quantity (*)		10 %
Phosphates (PO ₄)		< 2 ppm
Manganese (Mn)		< 0,05 ppm
Iron (Fe)		< 0,3 ppm
Alkalinity (HCO ₃)		70 – 300 ppm
Chloride ions (Cl ⁻)		< 50 ppm
Sulphate ions (SO ₄)		< 50 ppm
Sulphide ions (S)		No one




MAXIMUM CHEMICAL-PHYSICAL PROPERTIES ALLOWED FOR THE CIRCUIT WATER

Ammonium ions (NH ₄)	No one
Silica (SiO ₂)	< 30 ppm

(*) It is preferable to use pure water. Do not add more antifreeze than the maximum quantity specified in this manual.

5.10.2 Typical plumbing diagram

Refer to the "Handbook" for further information regarding possible unit installation configurations.

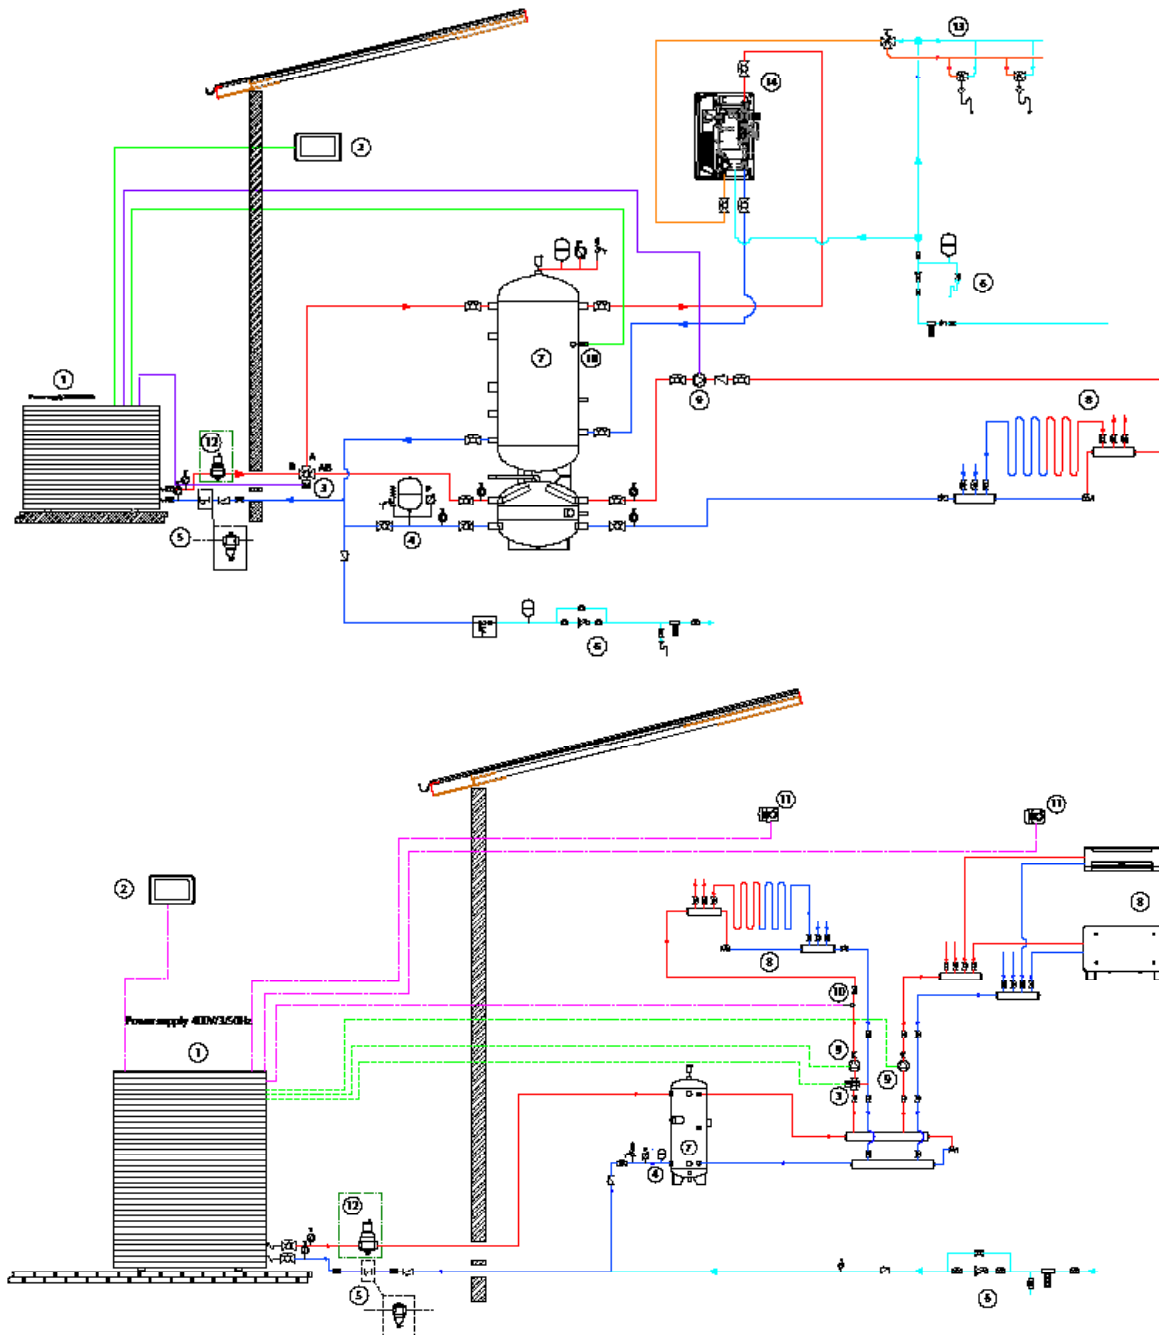

Num.	Description
1	Heat pump
2	Remote control
3	Mixing valve
4	Expansion tank
5	Y-filter or Dirt separator with integrated filter
6	Water supply
7	Technical storage
8	Hydronic terminals
9	Booster pump
10	Mixing probe



Num.	Description
11	Local thermostat
12	Deaerator
13	DHW
14	Boiler

5.10.3 Minimum water content and hydraulic circuit volumes

The table shows the minimum system water content recommended for the unit. The volume of the hydraulic circuit is also indicated. To ensure proper operation of the heat pump, this minimum content must be met. Taking into consideration the volume of water in the primary circuit piping, size the thermal flywheel to achieve the indicated volume.


Model SHP290	6 kW	9 kW	12 kW	15 kW	18 kW
Minimum system water content [L].	65	95	125	155	155
Hydraulic circuit volume [L]	2,1	2,9	3,5	3,5	3,5

5.10.4 Handbook


If you need more information about the possible configurations, there is a "Handbook" which is a technical notebook including a series of system diagrams where some proposed installation configurations of our high efficiency heat pumps are highlighted. The "Handbook" is also intended to show the symbiosis potential with some of our elements found in the catalogue. Please ask for the technical handbook directly from Sapphire Heat Solutions.

5.10.5 Condensation discharge system

All units of SHP290 series are built in such a way that the base of the unit acts as a condensate drip tray. A plastic fitting is supplied as standard, to be connected underneath the base in the special provision for connecting a drain pipe to channel condensate.

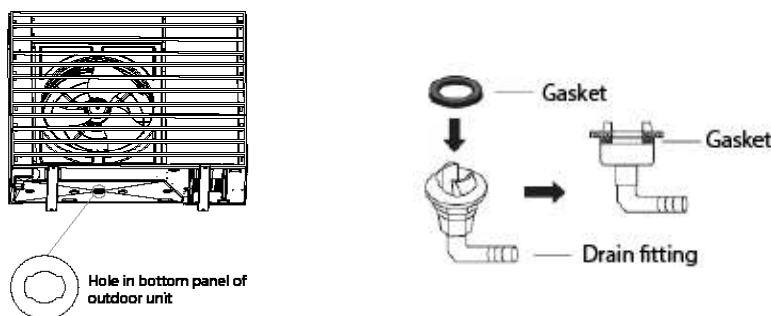

Each unit is fitted with a hole on the base of the hydronic kit (on the side of the coil) for draining any condensation that may percolate from the plumbing pipes and water formed as a result of the defrosting process. The pipes are well insulated, condensation production is minimal. In the event of a leakage, refrigerant gas can escape from the unit through the hole in the base panel, so it is recommended that the condensate drain is always directed to an open place near the unit (within the danger zone defined in Chapter 5.5). If the unit is installed on the ground, it is also possible to direct the condensation into a bed of rubble or gravel for drainage. For typical free-field ground installation, please refer to the following pictures:

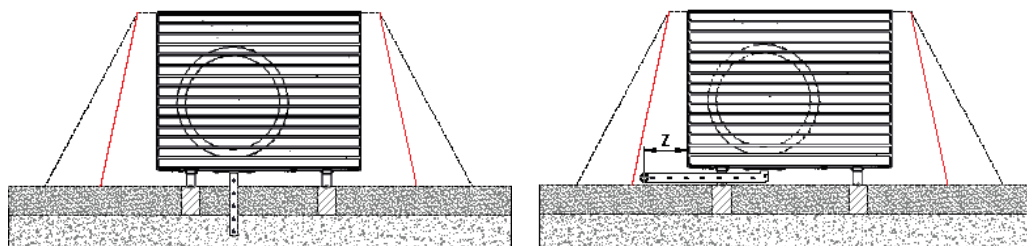

MODEL SHP290	z	
6 kW / 9 kW / 12 kW / 15 kW / 18 kW	mm	< 250

Caution: Do not obstruct the hole in the base panel for condensate drainage.

Especially in very cold climate regions, it is recommended to install elevation supports in order to allow ice formation under the unit without damaging it by freezing.



When outside air temperatures fall below 0°C, to prevent condensation from freezing, a heating resistor should be installed on the exhaust pipe. In this case, the heating element must be compatible with R290 refrigerant gas.


5.10.6 System load



- CAUTION: Supervise all filling/reintegration operations.
- CAUTION: Before filling/reintegration the system, disconnect power to the units.
- CAUTION: The filling / reintegrating of the system must always take place under controlled pressure (max. 1 bar). Ensure that a pressure reducer and safety valve is installed on the filling/reintegration line.
- CAUTION: The water in the filling/reintegration line must be properly pre-filtered from impurities and suspended particles. Ensure that a removable cartridge filter and a dirt separator are installed.
- CAUTION: Regularly check and vent the air built up in the system.
- CAUTION: Install an automatic air venting valve at the highest point of the system.

5.10.7 System discharge

If the unit needs to be drained completely, first close the manual inlet and outlet gate valves (not included in supply) and then detach the pipes on the outside of the water inlet and outlet to drain liquid from the unit (to make this operation easier, it is recommended to install two drain valves between the unit and manual gate valves on the outside of the water inlet and outlet).

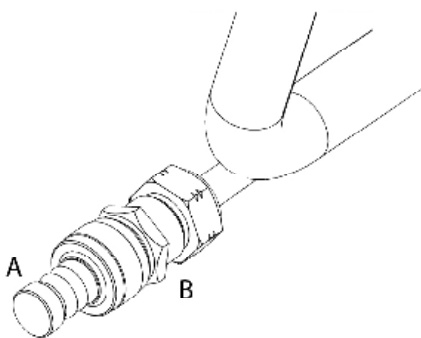

If it is necessary to top up the system or adjust the glycol content, the service tap can be used. Unscrew the cap of the service tap (A) and connect a pipe of 14 or 12 mm (inertial diameter measurements - check the tap model installed on your unit) connected to the water mains to the hose connector, then fill the system by unscrewing the ring nut (B). Once the operation is completed, tighten the ring nut (B) again and screw the cap (A). In any case, it is advisable to use an external tap to fill the system.

5.10.8 Deaerator

The unit is equipped with a high-efficiency deaerator that continuously captures and eliminates air and any refrigerant gas that may accumulate within the hydraulic circuit, avoiding undesirable effects such as premature corrosion and wear, reduced efficiency and exchange yield, as well as possible contamination of the water by R290 gas. The exhaust capacity is very high, with automatic gas expulsion down to micro-bubble level.

The deaerator is made of brass, a strong and durable material.

The deaerator must always be installed in a vertical position and in an outdoor ambient. It must be mounted immediately downstream of the unit on the hydraulic outlet pipe: in the event of gas expulsion, this will be within the danger zone, without causing any fire risk. The installation of the deaerator is compulsory to ensure the safety of people, animals and property, and necessary to maintain the warranty. Always follow the instructions in this manual: incorrect installation or installation in areas different from that prescribed (indoors or outdoors), as well as failure to install, commissioning and proper maintenance of the device must be considered as a possible cause of fire. The mixture of water and glycol can greatly reduce the deaerator's ability to remove dissolved gases: it is recommended to limit the glycol concentration to a maximum of 10%. Use products with a low tendency to foam, which could completely nullify the degassing effect and damage the system.



The installation of the deaerator must be carried out by qualified personnel according to national regulations and local requirements.


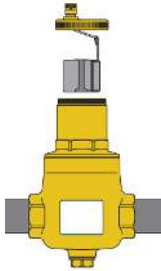

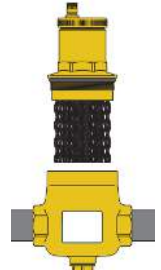


Ensure that the device connection fittings are hydraulically tight. Do not exert mechanical stress on the connection threads during installation, which could damage the component.




Do not exceed the maximum amount of glycol indicated in the manual, as this may reduce the deaerator's ability to remove gas, causing damage to the component.



	<p>Access to the moving parts that control the vent is obtained, after tapping the system, by removing the top cover.</p>	
	<p>After tapping the system, unscrew the part of the body containing the vent valve, to which the separator element is attached, for cleaning. This part is not removable.</p>	


5.11 ANTI-LEGIONELLA FUNCTION

Legionella is a bacterium present in natural and artificial aquatic environments, from which it is able to reach the pipes of the cold drinking water supply network, and then proliferate in the production, storage and distribution systems of domestic hot water in buildings under certain temperature conditions. All units in the SHP290 series can activate an anti-legionella disinfection cycle, significantly reducing the growth of bacteria and the risk of infection. The cycle consists of a heat treatment in which the temperature of the water in the domestic hot water storage tank is raised above 60°C, at which most bacteria die within a few minutes.

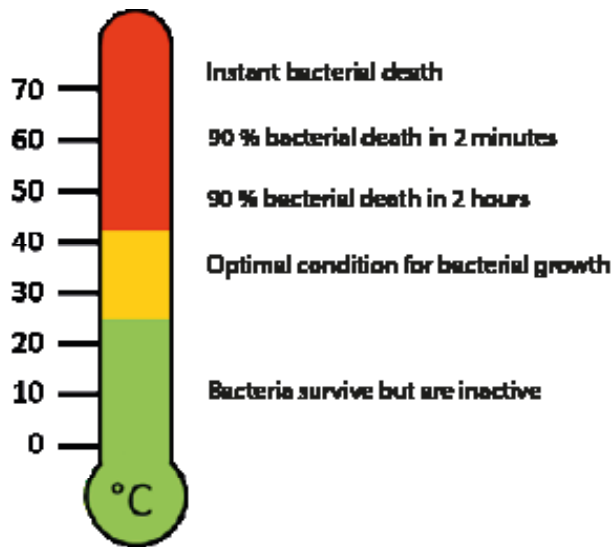

Disinfection is carried out regularly once a week, on the day and time specified by the controller. The system designer must prepare all technical solutions necessary for the prevention and control of legionella. Heat treatment is only really effective if it reaches all points in the plant, including the distribution terminals.

The document "Guidelines for the prevention and control of Legionellosis" of 07/05/2015 incorporates all the updated indications on the subject, while Legislative Decree 81/2008 Title X, Chapter I contains the provisions that apply to activities and workplaces exposed to biological agents.

	<p>WARNING: It is the designer's responsibility to check that the installation complies with the regulations in force in the country of installation.</p>
---	--

The operation of the anti-legionella cycle is shown below:


- At the day and time set by the controller, the machine switches to domestic hot water production mode.
- When the temperature of the water in the tank reaches a threshold value set by the controller, the sanitary integration electric heater is activated, which takes care of the thermoregulation of the system in order to maintain the water temperature above a minimum value.
- If the water temperature remains above the minimum value for a continuous time specified by the controller, the anti-legionella cycle is successfully completed, allowing the unit to return to normal operating condition.

The cycle fails if the machine is switched off ('OFF' status) or if it is not completed within a time limit. Within the alarm history, a notification is saved for each cycle indicating the outcome of the anti-legionella function. The user must periodically check that disinfection is working properly. For more information on the logic of the anti-legionella cycle, please refer to the MCO manual.



5.12 FUNCTIONAL DIAGRAMS


5.12.1 SHP290 6 kW / 9 kW

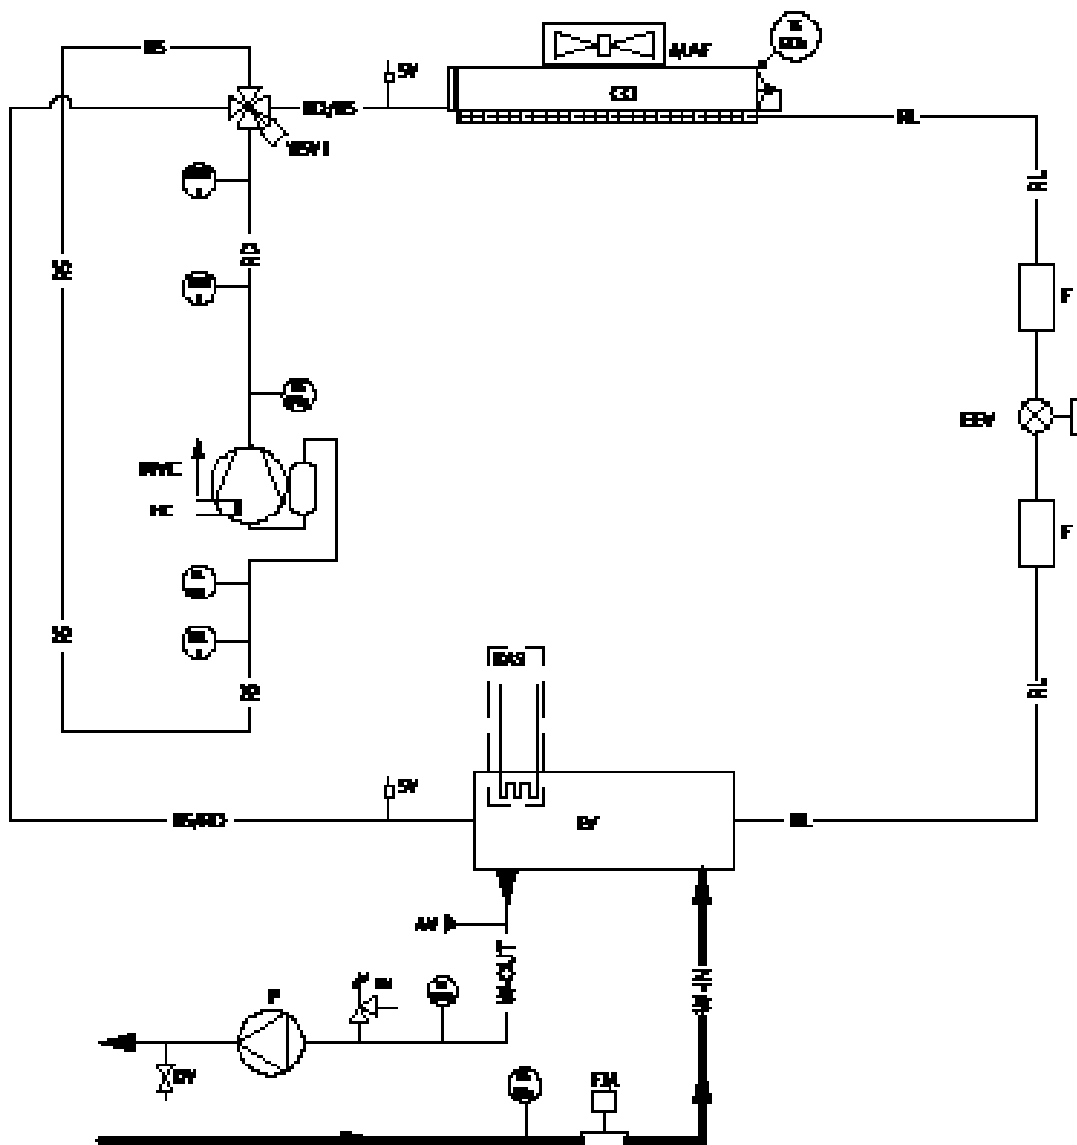

LEGEND					
CODE	NUM.	DESCRIPTION	CODE	NUM.	DESCRIPTION
INVC	1	VARIABLE SPEED COMPRESSOR	W-OUT		WATER SYSTEM OUTLET LINE
CO	1	COIL	W-IN		WATER SYSTEM INLET LINE
EV	1	PLATE HEAT EXCHANGER	TRH	1	HIGH PRESSURE TRANSDUCER
EEV	1	ELECTRONIC EXPANSION VALVE	TRL	1	LOW PRESSURE TRANSDUCER
YISV	1	4-WAY CYCLE REVERSING VALVE	TE EXT	1	OUTDOOR AIR TEMPERATURE PROBE
KAS		HEAT EXCHANGER ANTIFREEZE HEATER	TE SD	1	SUCTION LINE TEMPERATURE PROBE
F	1,2	FILTER	TE DT	1	COMPRESSOR DISCHARGE TEMPERATURE PROBE
SV	1,2	CHARGING CONNECTION	PSH	1	HIGH PRESSURE SWITCH
HC	1	CRANKCASE HEATER	TE IN	1	RETURN TEMPERATURE PROBE
MAF		AXIAL FAN	TE OUT	1	FLOW TEMPERATURE PROBE
RS		SUCTION LINE	DV		DRAIN VALVE
RD		DISCHARGE LINE	RV		SAFETY VALVE
RL		LIQUID LINE	FM		FLOWMETER
RD/RS		DISCHARGE/SUCTION LINE	P		PUMP
RS/RD		SUCTION/DISCHARGE LINE	AV		AUTOMATIC AIR VENTING VALVE



5.12.2 SHP290 12 kW / 15 kW / 18 kW

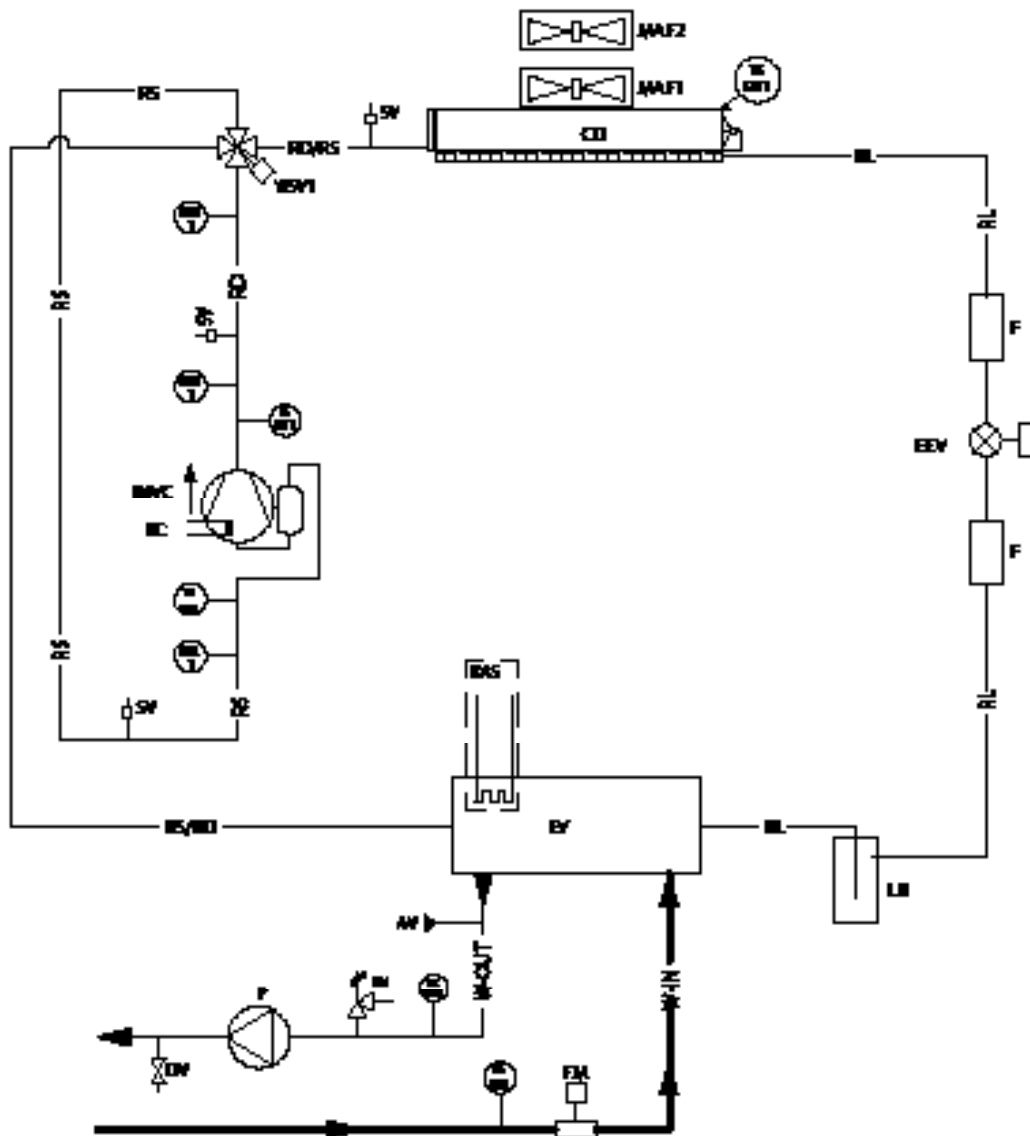












LEGEND					
CODE	NUM.	DESCRIPTION	CODE	NUM.	DESCRIPTION
INVC	1	VARIABLE SPEED COMPRESSOR	W-IN		WATER SYSTEM INLET LINE
CO	1	COIL	TRH	1	HIGH PRESSURE TRANSDUCER
EV	1	PLATE HEAT EXCHANGER	TRL	1	LOW PRESSURE TRANSDUCER
EEV	1	ELECTRONIC EXPANSION VALVE	TE EXT	1	OUTDOOR AIR TEMPERATURE PROBE
YISV	1	4-WAY CYCLE REVERSING VALVE	TE SD	1	SUCTION LINE TEMPERATURE PROBE
LR	1	LIQUID RECEIVER	TE DT	1	COMPRESSOR DISCHARGE TEMPERATURE PROBE
F	1,2	FILTER	PSH	1	HIGH PRESSURE SWITCH
SV	1,2	CHARGING CONNECTION	TE IN	1	RETURN TEMPERATURE PROBE
HC	1	CRANKCASE HEATER	TE OUT	1	FLOW TEMPERATURE PROBE
MAF		AXIAL FAN	DV		DRAIN VALVE
RS		SUCTION LINE	RV		SAFETY VALVE
RD		DISCHARGE LINE	FM		FLOWMETER
RL		LIQUID LINE	P		PUMP
RD/RS		DISCHARGE/SUCTION LINE	AV		AUTOMATIC AIR VENTING VALVE
RS/RD		SUCTION/DISCHARGE LINE	KAS		HEAT EXCHANGER ANTIFREEZE HEATER
W-OUT		WATER SYSTEM OUTLET LINE			



5.13 ELECTRICAL CONNECTIONS


Check that the power supply matches the unit's electric nominal data (voltage, phases, frequency) displayed on the rating plate on the unit's side panel. The electric power connections must be made in accordance to the wiring diagram enclosed with the unit and in conformity with national and international standards (providing general circuit breaker, residual current devices for each line, proper earthing of the plant, etc.

	Before starting any operation, make sure that the power supply is disconnected.
	The electrical panel is positioned below the cover. Respect the minimum clearances reported in Chapter 5.4 to perform wiring.
	The installer is responsible to provide an isolating system (e.g. magnetothermal differential circuit breaker) upstream of the unit's electrical connections.
	The supply voltage must not vary by more than $\pm 10\%$ of the nominal value. Please contact the electricity supply company if this tolerance is not respected. The power supply must comply with the limits mentioned, otherwise the warranty shall expire immediately.
	If the supply cable is damaged, it must be replaced by qualified personnel, (IEC 60335-2-40 Annex HH), in order to prevent any risk.
	Any devices placed nearby can cause / suffer electromagnetic disturbances to / from the unit. Be aware of this risk at the installation site. It is recommended to electrically power the unit with an adequate line and protections and use an independent cable duct.
	The flowmeter (FM element in the hydraulic diagram above and factory installed) must ALWAYS be connected as shown in the circuit diagram. Never jumper the flowmeter connections on the board in the terminal box. The guarantee will no longer be valid if the flowmeter connections have been altered or incorrectly connected.
	CAUTION: The remote control panel is connected to the chiller by 4 cables with a cross-section of 1.5 mm ² . The power cables must be separate from the remote control cables. Maximum distance 50 metres.
	The remote control panel must not be installed in an area with strong vibrations, corrosive gases, excessive dirty or high moisture. Leave the area near the chiller clear.
	All electrical components have been designed to work in an environment where R290 gas is present. Any damage, tampering or alteration can cause a fire hazard.
	Do not tamper with the cable fixing. Do not disconnect the electrical panel connectors.


5.13.1 Access to the electrical panel and user board

The following is the procedure to remove the cover of the electrical panel and of the user board case. The images show sizes 6 kW / 9 kW (single fan) and sizes 12 kW / 15 kW / 18 kW (twin fan).

To access the electrical panel follow the instruction below:

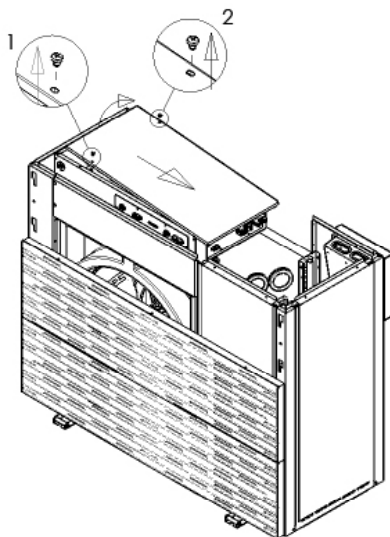


1. After removing the upper grille and cover (as described in Chapter 5.8), unscrew the screws holding the cover in place with a cross screwdriver (number 1, 2).
2. Lift up the electrical panel cover to remove it and proceed with wiring operations.

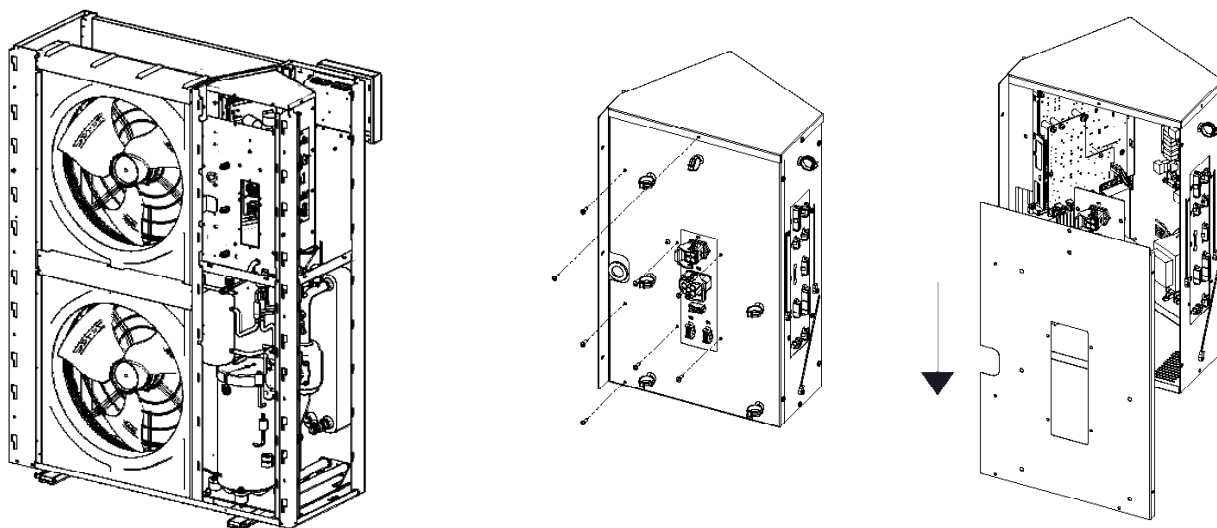

1. After removing the grilles, cover, side panels and angle brackets (as described in Chapter 5.7), unscrew the highlighted screws holding the cover of the electrical panel with a cross screwdriver.
2. Push down the control panel cover to remove it and proceed with wiring operations.

To access the user board instead, proceed as follow:

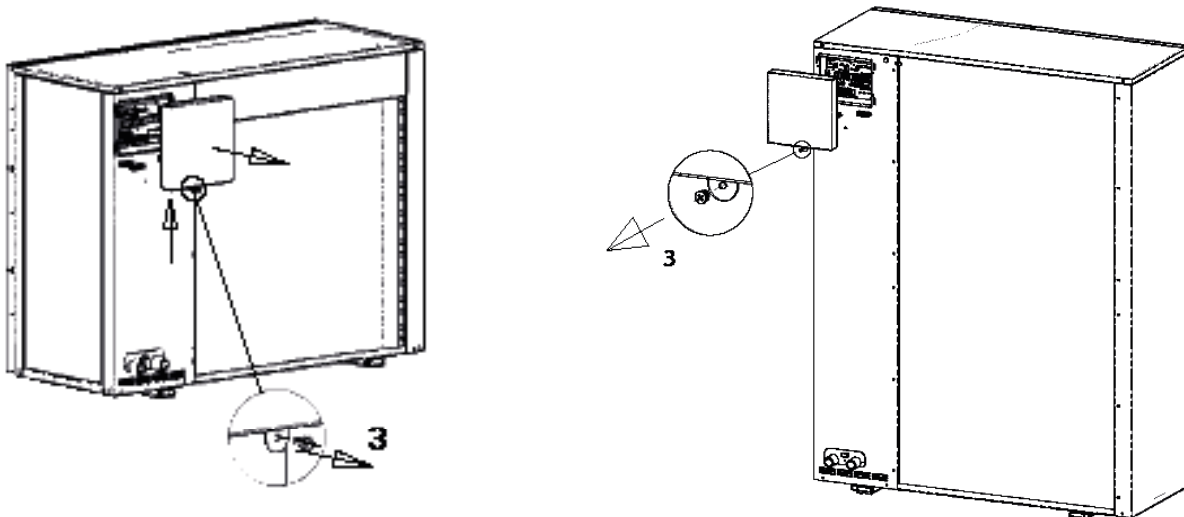



1. Unscrew screw M4 (number 3) using a cross screwdriver.
2. Release the box by first pulling it upwards and then outwards.

The above-mentioned operations must be carried out with the machine off and power disconnected (by means of the specific disconnector applied by the installer). Operations to be carried out by qualified personnel (IEC 60335-2-40 Annex HH).

When the work is complete, replace all the removed covers with all the screws and seals provided (if any).

5.13.2 Power supply

Electrical connections must only be carried out by QUALIFIED PERSONNEL, in accordance with current regulations.

Make sure to install an adequate ground connection, incomplete grounding can cause electric shock. The manufacturer cannot be held responsible for any damage caused by failure or ineffective earthing.

The power cables, electrical protections and line fuses must be sized in accordance with what is reported in the unit's wiring diagram and in the electrical data contained in the technical characteristics table.

Use a dedicated power line, do not power the appliance through a line to which other users are connected. Fasten the power cables securely and make sure they do not come into contact with sharp corners. Use double insulated cables with copper wires: for the power supply of the units, it is recommended to use a cable with characteristics type H07VV-F or higher.

The ground connection must be carried out first during the connection phase, vice versa it must be removed last when the unit is disconnected. In the event of any loosening of the power cable, it must be ensured that the tension of the active conductors takes place before that of the ground wire.

Prepare the laying of the building's electrical cables through the wall feedthrough in the direction of the product. Depending on the type of laying, the physical location and the length of the cables (whether less or more than 10 m), it will be the responsibility of the electrical system designer to make an appropriate choice for the dimensioning of the system.

5.13.3 Protection devices

It is mandatory to install electrical separation devices upstream of the unit, sized according to the nameplate data on the unit:

- For electrical protection, delayed fuses with characteristic C must be used. In the case of connection to the three-phase mains, the fuses must be able to be switched 3-pole. They must have a contact opening of at least 3 mm.
- Install an all-current sensitive differential magnetothermal switch type B (intervention threshold 30 mA, breaking capacity 4.5 kA).

Power supply	Model SHP290	DELAYED FUSES WITH CHARACTERISTIC C (Alternatively DIFFERENTIAL SWITCH TYPE B)	Recommended cables cross-section (max. length 10 m)	Tightening torque clamps
230V / 1ph	6 kW	16 A	4 mm ²	N-L-PE: 0,8 Nm
230 V / 1ph	9 kW	25 A	6 mm ²	N-L-PE: 0,8 Nm
230V / 1ph	12 kW	32 A	6 mm ²	N-L-PE: 0,8 Nm
400V / 3ph	15 kW / 18 kW	20 A	4 mm ²	N-L-L2-L3-PE: 0,8 Nm

The units comply with electromagnetic compatibility specifications, however, the electrical system designer must make the appropriate assessments to ensure the absence of interference.

5.13.4 User board

The connection board is located under the machine cover. For access see Chapter 5.12.1.

The board must be connected respecting the notes below. The connections shown below are standard. Other connections are given in the MCO-manual of the board-machine control (see "USER AND INSTALLER CONFIGURATION TABLES"), according to the configurations adopted.

CAUTION: It is important to keep the high voltage cables separated from the very low voltage ones.


TERMINAL	CONNECTION	TYPE
PE	Connect the earthing cable	Input for 1-Ph/N/PE power supply, 230 V, 50 Hz. (only for sizes 0106/0109/0112)
N	Connect the neutral cable from mains	
L	Connect phase L1 cable from mains	
L2	Connect phase L2 cable from mains	Input for 3-Ph/N/PE power supply, 400 Vac, 50 Hz. (only for sizes 0115 / 0118)
L3	Connect phase L3 cable from mains	



TERMINAL	CONNECTION	TYPE
1A	Signal connection channel 1 Modbus RTU + remote keyboard	Modbus communication for remote keyboard i-CR
1B	Signal connection channel 1 Modbus RTU - remote keyboard	
1C	Signal connection channel 1 Modbus GND remote keyboard	
12 Vac	Remote keyboard power supply (12 Vac, 50 Hz, 500 mA)	For signal use shielded twisted pair cable 3 x 0.75 mm ² (1A = pin 7, 1B = pin 8, 1C = pin9)
12 Vac	Remote keyboard power supply (12 Vac, 50 Hz, 500 mA)	
2A	Signal connection channel 2 Modbus RTU +, GI3 module or remote supervision	Connection of GI3 module, if fitted as an accessory. Alternatively connection of Modbus RTU RS 485 communication for remote supervision, if CM accessory present. The GI3 module and CM supervision cannot be connected at the same time.
2B	Signal connection channel 2 Modbus RTU -, GI3 module or remote supervision	
2C	Signal connection channel 2 Modbus GND, GI3 module or remote supervision	
ID2	Remote summer/winter mode change input (to activate the function see relevant section in the MCO manual)	Voltage-free digital input
ID3	Remote on/off input (closed = machine on / open = machine off)	Voltage-free digital input
AI6	DHW probe (to activate the function see the relevant section in the MCO manual)	Analogue input
AI7	System remote probe (to activate the function see relevant section in the MCO manual)	Analogue input
AI8	Double set point (to activate the function see the relevant section in the MCO manual)	Digital input
DO3 (*)	System integration resistance	Single-phase voltage output 230 Vac, 50 Hz, maximum current 300 mA (AC1)
DO6 (*)	Valve outlet sanitary hot water	Single-phase voltage output 230 Vac, 50 Hz, maximum current 300 mA (AC1)
DO7 (*)	Valve outlet second set point	Single-phase voltage output 230 Vac, 50 Hz, maximum current 300 mA (AC1)

(*) If used, it is advisable to drive the coil of a relay or contactor with the voltage output to manage the resource.

User board 6 kW / 9 kW / 12 kW / 15 kW / 18 kW

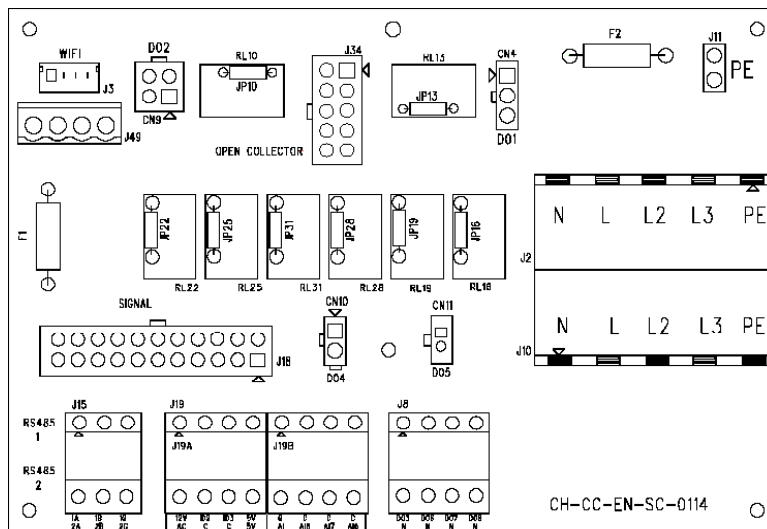

5.13.5 Smart Grid Ready

The SHP290 heat pumps are Smart Grid Ready (SG Ready) certified, a label introduced by the German Heat Pump Association (BWP) that identifies heat pumps capable of communicating with the public electricity grid via the SG Ready interface. This allows the electricity utility an efficient load management for grid support: in case of electricity peaks or shortages, the grid operator can give the input to heat pumps equipped with SG Ready logic to temporarily switch off or on, achieving intelligent utility control.

Heat pumps, regardless of current demand, can in fact store excess electricity in the form of thermal energy (e.g. in a hot water accumulator or a dedicated tank) and use it to satisfy heat demand, as well as being switched off in a targeted manner to mitigate consumption peaks. The SG Ready interface can be used by grid operators to control the device or to increase self-consumption in combination with a photovoltaic system.

To enable the SG Ready function, the grid supplier's SG Ready cables must be connected to the user board's terminals ID2, C (digital input reference ID2 = SG Ready 1) and AI8, C (digital input reference ID9 = SG Ready 2). Depending on the states of the two digital inputs for the SG Ready function, the unit is able to cover four operating states (heating and/or DHW mode):



Digital input		Description
ID 2 (SG Ready 1)	ID9 (SG Ready 2)	
Closed	Open	OFF command The heat pump remains in the forced-off condition.
Open	Open	Normal operating.
Open	Closed	Command ON The heat pump increases the set point by an offset, applying it only when the compressor and/or thermoregulation is running.
Closed	Closed	Forcing command ON The heat pump immediately forces an offset set point increase, regardless of the compressor status.

The operating states OFF, ON and forced ON can be set by the grid operator for a maximum time of 2 hours, after which the unit reverts to normal regulation.



ATTENTION: If the power grid to which the unit is connected is set up as a smart grid, the SG Ready function can be configured according to the MCO manual and the wiring diagram.

Heat pumps labelled 'SG Ready' are a step towards electricity supply optimisation and are eligible for further funding in some EU member states.

5.13.6 Control logics

For control logics please refer to the MCO manual of unit control, which can be obtained from the manufacturer.

5.13.7 Fuses

Details of the type and nominal characteristics of the fuses can be found on the machine label, on the circuit diagrams and printed directly on the control board.

5.14 ENERGY COUNTER

The SHP290 series units include software for extrapolating operating data from the unit. The data that can be read are: the unit's output power, the total power input, the total cumulative output and consumed energy for: the current day, the previous month (from the day before, to the same date as the current day of the previous month) and the previous year (from the month before the current, to the same month of the previous year).

These data are made available, differentiated between cooling and heating production modes, in order to monitor the operation of the heat pump and in compliance with the regulations in force in some EU countries.

The data for heat output and total input power are the instantaneous operating values of the heat pump, while the other values are cumulative for the defined time.

5.14.1 Operation and necessary equipment (e-PRO)

The system measures and projects instantaneous data in the first registers, while data reporting energy over time is only available if the heat pump is connected to a master remote control equipped with a clock, such as the e-PRO



The heat pump and remote controls do not have a memory area for storing data. It is necessary to use a master with data-logger function.

5.14.2 Data availability

Instantaneous data are in kW, while cumulative data are in kWh. Below are the registers for reading and saving data from the unit:

- 8000: Heating power output
- 8004: Total input power
- 8005: Energy consumed yesterday in cooling
- 8006: Energy consumed last month in cooling
- 8007: Energy consumed last year in cooling
- 8008: Energy output yesterday in cooling
- 8009: Energy output last month in cooling
- 8010: Energy output last year in cooling
- 8011: Energy consumed yesterday in heating
- 8012: Energy consumed last month in heating
- 8013: Energy consumed last year in heating
- 8014: Energy output yesterday in heating
- 8015: Energy yield last month in heating
- 8016: Energy output last year in heating


5.15 EXTERNAL MODULE (GI3)

The GI3 system management module allows you to increase the functionality managed by the machine. It is only supplied as an external kit.



5.15.1 NET DIMENSIONS AND WITH PACKAGING

Description	Width [mm]	Height [mm]	Depth [mm]	Weight [kg]
net	261	317	128	5,3
with packaging	372	422	185	5,6

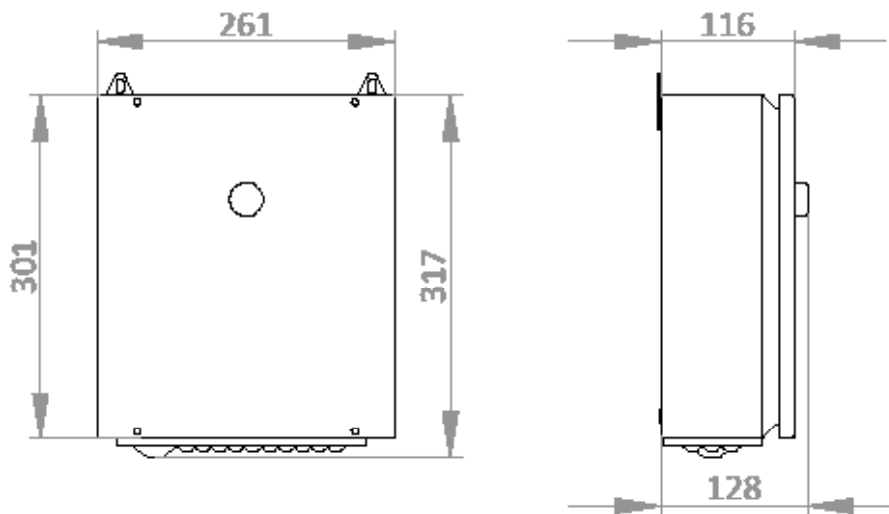

5.15.2 Technical data



Technical characteristics	Unit	Value
Supply voltage	V	230
Supply frequency	Hz	50
Maximum power absorption	kW	1,5
Maximum current for DO	A	0,5
Min/Max ambient operating temperature	°C	-20 / +50
Operating weight	Kg	5,3

5.15.3 Installation of the external kit (GI3)

The product has an IPX4 protection rating and can be installed outdoors away from the safety zone of the unit. The box is supplied with brackets for fixing with nuts and washers. Refer to the pictures below for mounting the supports to the box and for drillings. The dowels are not supplied, choose the most suitable ones according to the type of wall where the product will be fixed and the weight shown in the table.




Check that the supporting wall and dowels are adequate to support the weight of the product.

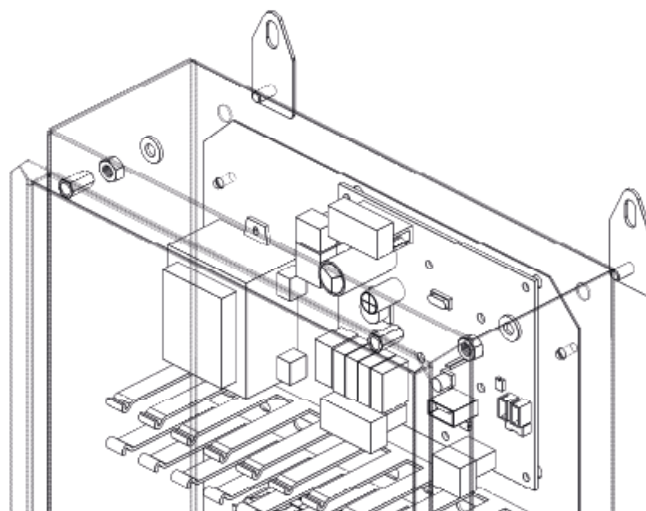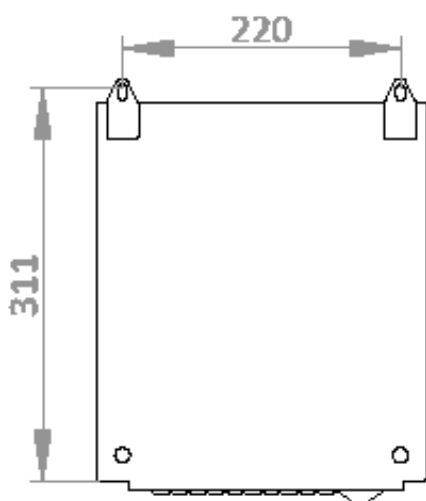


Connect the external kit to the heat pump via a cable suitable for modbus communication (cable not supplied, type to be used 3x0.5 mm² twisted and shielded). See the correspondence between the terminals of the user card and those of the kit in the table below:



Heat pump terminal	GI3 kit terminal
2C (GND)	X-14.2
2A (+)	X-15.1
2B (-)	X.14.1

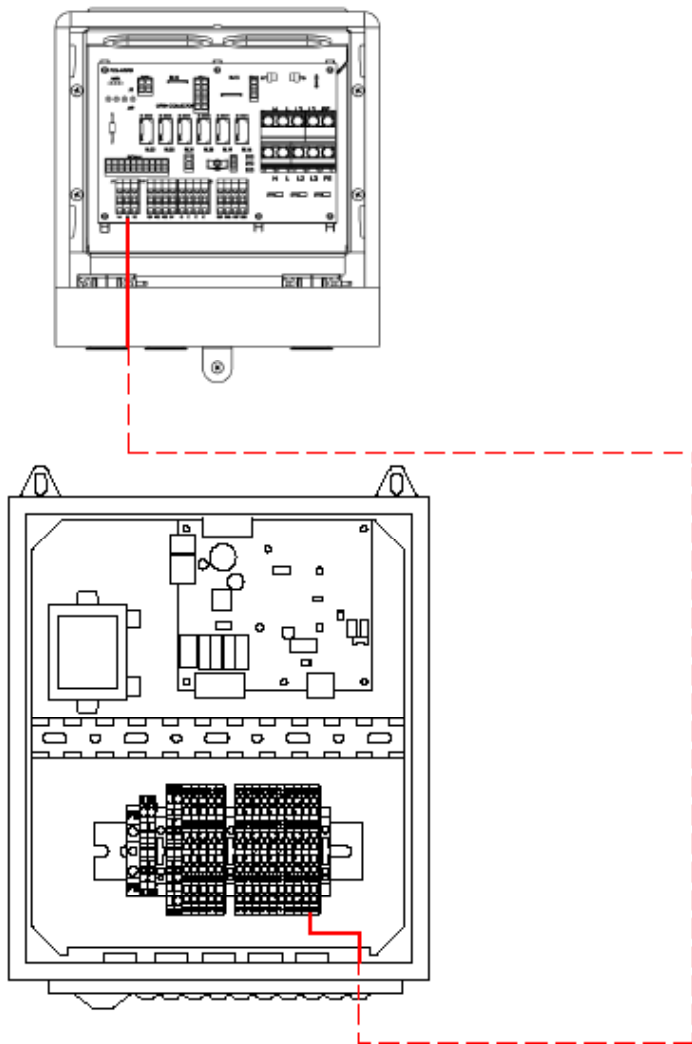

External module terminal board:

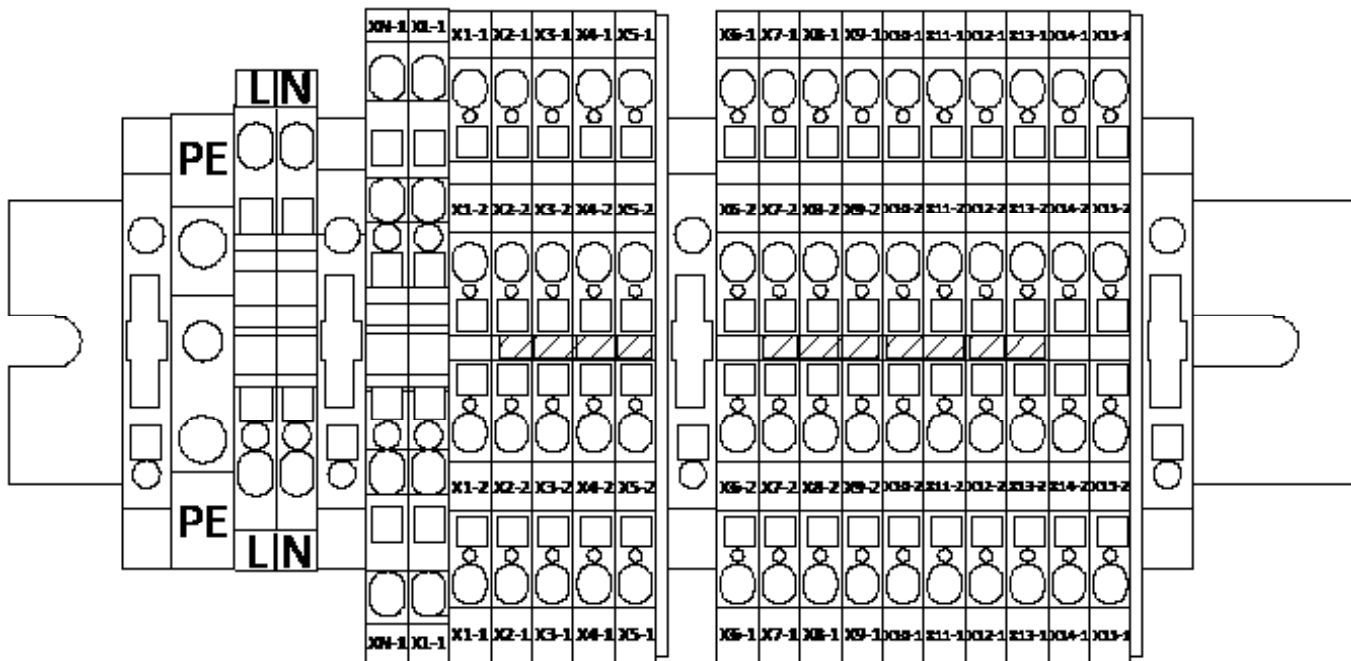




TERMINAL	CONNECTION	TYPE
PE	Connect the earthing cable	Input for 1-Ph/N/PE power supply, 230V, 50Hz
L	Connect the phase cable from the mains	
N	Connect the neutral cable from the mains	
X1-1/ X2-1/ X2-2	Connect the mixing valve	Digital outputs
X3-1/ X3-2	Connect the solar circulator	
X4-1/ X4-2	Connect the solar drain valve	
X5-1/ X5-2	Connect the relaunch circulator	
X6-1/ X6-2	Connect the mixing valve probe	Analogue inputs
X7-1/ X7-2	Connect the ACC. solar probe	
X8-1/ X8-2	Connect the solar connector probe	
X9-1/ X9-2	Connect the ambient thermostat	
X10-1/ X11-1	/	Analogue outputs
X10-2/ X11-2	/	
X12-1/ X12-2/ X13-1	/	Digital inputs
X14-1/ X14-2/ X15-1	Modbus connection to the machine's CNTR board	Modbus communication

6. STARTUP

Before start-up:

- Check that the diagrams and manuals of the installed machine are available.
- Check the availability of electrical and hydraulic diagrams of the system to which the machine is connected.
- Check that the shut-off valves of the water circuits are open.
- Check that the water circuit was filled under pressure and the air vented.
- Check that all hydraulic connections are correctly installed and that all indications on the rating plates are respected.
- Ensure that provisions have been made for condensate drainage.
- Check the electrical connection and correct fastening of all the terminals.
- Check that electrical connections have been carried out correctly according to current regulations including earthing.
- The voltage must be as stated on the nameplate of the unit.
- Make sure that the electric voltage is within the tolerance limits ($\pm 5\%$).
- Check that the electric heaters of the compressors are properly powered.
- Check, if required for the installation site, whether a residual current circuit breaker is installed.
- Check that there are no gas leaks. Each operator must equip himself with a personal explosimeter for R290 gas.
- Before switching the unit on, check that all panels are positioned correctly and well-fixed with screws.
- When switching on the machine, check that no more of one defrost is activated in the first 35 minutes of operation. Multiple consecutive defrosts may indicate incorrect sizing of the unit with respect to the thermal load required by the application.



CAUTION: The unit must be connected to the electric mains and placed in STANDBY (powered on) by closing the master switch at least 12 hours before start-up. This will allow the heaters to adequately warm up the compressor crankcase (the heaters are powered automatically when the switch is closed). The heaters are working properly if after a few minutes the temperature of the compressor crankcase is 10-15°C higher than ambient temperature.

CAUTION: Check that the weight of the pipes does not bear upon the machine structure.

CAUTION: Never use the master switch to stop the unit temporarily, this must only be done to disconnect the unit from the power supply for long downtimes (e.g. seasonal stops etc.). Furthermore power is missing, the crankcase heaters will not be powered with the risk of breaking the compressors when the unit is switched on.

CAUTION: Do not modify the electrical connections of the unit otherwise the warranty will be immediately void.

CAUTION: Summer/winter operation must be selected at the beginning of the relative season. In order not to cause damage to the compressors, avoid frequent and sudden changes of this operation.

CAUTION: When installing and starting up for the first time, make sure that the machine operates correctly in both heating and cooling mode.

6.1 SWITCHING ON THE UNIT

The unit is switched on via the remote interface function Smart Controller. Please refer to the dedicated chapter for more information. All units in the SHP290 series have no display mounted on board.

7. INSTRUCTIONS FOR THE USER

Write down the unit's identification data to be able to give it to the assistance centre when requesting an intervention.



The identification plate applied on the machine has all of the technical and performance data of the appliance. In case of tampering, removal or deterioration, ask to the Technical Assistance Service for a copy.

Tampering, removal and deterioration of the identification plate complicates installation, maintenance and request for spare parts.

We recommend keeping track of the interventions carried out on the unit so as to make any troubleshooting easier. In case of failure or malfunctioning:

- check the type of alarm triggered to report it to the assistance centre;
- contact an authorised assistance centre;
- if requested by the assistance centre, immediately deactivate the unit without resetting the alarm;
- require the use of original spare parts.

8. SHUTDOWNS FOR LONG PERIODS

The shutdown mode of the plant depends on the site of application and the time the plant is expected to be shut down. If the unit is equipped with the antifreeze system, even when off ("off" position of the on-board unit system).



The anti-freeze system remains in operation if the continuity of electrical supply to the appliances is guaranteed.

If the system is expected to remain idle for a long period, it is recommended to empty the liquid from the system unless there is an adequate amount of glycol.

To switch off the unit completely after having emptied the system:

- Switch off the unit setting the switch of each appliance at "OFF".
- Close the water taps.
- Set the general residual current device at "OFF" (if installed upstream of the system).



If the temperature drops below zero there is serious danger of frost: provide a mixture of water and glycol in the system, otherwise drain the water system and the circuits of the heat pump.



CAUTION: Even the transient operation, with water temperatures below +5°C is not guaranteed on the basis of the limits established in Chapter 13.4. Before you turn the unit back on after a long idle period, make sure that the temperature of the mixture of water and glycol is higher than or at least equal to +5°C.

9. MAINTENANCE AND PERIODIC CHECKS



CAUTION: All the operations described in this chapter must be carried out by QUALIFIED PERSONNEL only (IEC 60335-2-40 Annex HH). The end user is forbidden to undertake any modification, repair or maintenance of the product. Before performing any intervention on the unit or accessing internal parts, make sure you have disconnected power.



CAUTION: Before starting to operate, safety checks must be performed to ensure the combustion hazard is reduced to the minimum. The work must be undertaken according to a controlled procedure, to reduce to the minimum the risk of flammable gases or vapours while performing the work. The area must be checked with an appropriate refrigerant fluid detector before and during the work.



During any work carried out on the machine, the operator must always equip himself with a personal explosimeter for detecting the refrigerant gas R290, calibrated to a maximum threshold of 20 %LFL (this device must be compliant for use in fire risk zones and not be a source of ignition).



Maintenance must only be carried out in weather conditions suitable for the intended operations.



Before working on the unit, make sure that you have the appropriate working equipment available that complies with the use with flammable gases.













For maintenance, the use of a lock-valve is strongly recommended (refrigerant circuit access valve) for hooking up with hoses (hose), in order to avoid gas leaks and risk of burns.



CAUTION: It is possible that a certain quantity of oil from the compressor is deposited in the pipes of the refrigeration circuit, especially by bends. In case of maintenance operations in which it is necessary to unsolder the pipes, it is strongly recommended to proceed with the cutting of the same and not with the disordering with a torch, as the flame triggers any oil present.



	It is prohibited to fill the refrigerant circuits with a refrigerant other than that indicated on the identification plate. Using a different refrigerant can cause serious damage to the compressor.
	It is prohibited to use oils other than those indicated in this manual. Using a different oil can cause serious damage to the compressor.
	The head and discharge pipe of the compressor are at quite high temperatures.
	Be careful when working near the condensing coils. The aluminium fins are very sharp and can cause serious injuries.
	Always use appropriate personal protective equipment.
	After the maintenance operations, close the panels by fixing them with screws. Pay particular attention to the correct closing of the electrical panel box.
	During the winter months in particularly cold and humid climates, ice may form on the front protective grilles of the units. To allow proper air flow, check for such ice deposits and remove them if necessary.
	After maintenance work, pay attention to the correct positioning of the electrical cables in the respective cable glands of the user board case.
	In the event of work/building work in the vicinity of the unit, consider whether it is necessary to switch off the unit, drain it of refrigerant or protect it with suitable protection. If the product is in an area where vehicles are operating, install adequate collision protection.
	It is recommended to have specialised personnel perform periodical inspections and maintenance. The EU regulation n.517/2014 establishes that users must perform regular inspections on the plants, checking water tightness and eliminating any leaks as quickly as possible. Verify the mandatory nature and the documentation required in regulation n.517/2014 and its subsequent amendments or repeals.

Plan all maintenance activities necessary for the safety of the unit. The following are the recommended (R), and mandatory (M), activities for correct operation of the unit. The mandatory activities must be carried out by an authorised customer service which issues a corresponding certificate. Failure to comply with these activities will entail forfeiture of the warranty and could considerably shorten the service life of your product.

OPERATION	M / R	1 month	4 months	6 months	12 months
Filling the water circuit.	R	x			
Presence of bubbles in the water circuit.	R	x			
Check the proper working of the safety and control devices.	M	x			
Check that there are no oil leaks from the compressor.	R	x			
Check if there is a possible water leakage from the water circuit.	R	x			
Check that the flowmeter works properly.	M	x			
Check that the crankcase heaters are powered and running.	R	x			
Clean the metal filters of the water circuit.	M	x			
Clean the finned coil with compressed air or water jet	R		x		
Check that the electric terminals both inside the electric panel and in the terminal blocks of the compressor are well tightened.	M		x		
Tightening of plumbing connections.	R		x		
Factory tightening torques.	M				x
Check fixing and balancing of the fans.	R		x		
Clean the air filters in the electrical panel or replace them if necessary (when present).	M		x		
Correct electric voltage and phase imbalance (without load and under load).	R			x	
Correct absorption.	R			x	
Check the refrigerant charge and eventual leaks.	M			x	



OPERATION	M / R	1 month	4 months	6 months	12 months
Check the operating pressure, superheating and sub-cooling.	R			x	
Circulation pump efficiency.	R			x	
If the unit should be out of service for a long period, drain water from the pipes and from the heat exchanger. This operation is necessary if, during seasonal stoppages, ambient temperature is expected to go down below the freezing point of the employed fluid.	M			x	
Check for corrosion/oxidation.	R				x
Check panel fastening.	R				x
Check the water quality (see chapter Characteristics of the system water) and the possible concentration of glycol.	M			x	
Check the pressure drops of any filter driers on the liquid line.	R			x	
Check the hydronic side safety valve according to EN 806-5.	R			x	
Cleaning the deaerator.	M			x	

9.1 CLEANING THE FINNED COIL

To correctly clean the coil, follow the instructions below:

- Remove surface dirt. Deposits such as leaves, fibres etc. should be removed using a vacuum cleaner (use a brush or other soft accessory and avoid rubbing against metal or abrasive parts). If compressed air is used, care must be taken to keep the airflow perpendicular to the surface of the battery to avoid bending the aluminium fins. Pay attention not to bend the fins with the nozzle of the compressed air lance.
- Rinse. Rinse with water. It is possible to use chemical substances (specific detergents for finned coils). Rinse the coils by letting the water run inside each individual passage of the fins, until they are perfectly clean. Pay attention to direct the water jet perpendicular to the surface of the coil in order not to bend the aluminium fins. Do not strike the coil with the water hose. Apply your thumb at the end of the hose to increase the pressure of the water jet instead of using specific nozzles which could damage the coil.


9.1.1 Cleaning the finned coils treated with the anti-corrosion method

The anti-corrosion treatment applied to the finned coils (available as an alternative to the standard coils) guarantees protection against aggressive atmospheres.

The frequency of cleaning depends on the environmental conditions and is left to the common sense of the maintenance staff. When oxidizing dust or grease particles are observed on the battery surface, cleaning is recommended. In general, in a slightly polluted atmosphere, it is recommended to carry out the cleaning treatment every three months.

Washing should be carried out with preferably hot water (40-60 ° C) and detergent with neutral pH, while rinsing is carried out with abundant fresh water (50 l / m2).

If the maintenance staff observes a lack of protective cover on the edge of the fins, it is necessary to contact the nearest service center to proceed with a new application of the cover and completely restore the protection against corrosion.



CAUTION: Do not clean the coil using high-pressure cleaners so as not to apply excessive pressure which could cause irreparable damage. Damage caused by cleaning with unsuitable chemical substances or excessively high water pressure will not be recognised under warranty.

CAUTION: The aluminium fins are thin and sharp. Pay the utmost attention and use appropriate PPE to avoid cuts and abrasions. Cover your eyes and face appropriately to avoid squirting water and filth while blowing. Wear waterproof shoes or boots and clothing covering your entire body.


For units installed in aggressive atmospheres with a high fouling rate, cleaning of the coil must be part of the routine maintenance program. In these types of installations, all of the dust and particulates deposited on the coils must be removed as soon as possible through regular cleaning according to the methods shown above.

9.2 CLEANING OF EXTERNAL SURFACES

The sheets of the outer casing must be properly cleaned to avoid the accumulation of dust / dirt, preventing the onset of corrosion. The painting ensures resistance to atmospheric agents but it is good practice to make sure to remove any dirt present, cleaning the surfaces with neutral detergent and water, especially if the unit is installed in places with an aggressive atmosphere (high level of pollution, salt, etc.).

9.3 EXTRAORDINARY MAINTENANCE

All extraordinary maintenance works must be carried out by an authorised assistance centre.



All maintenance and inspection operations must be carried out only by QUALIFIED PERSONNEL (IEC 60335-2-40 Annex HH). All equipment used during maintenance operations must be compatible with the refrigerant gas R290.

Some extraordinary maintenance work may involve the replacement of broken components, which may have significant mass. Below is a list of components (standard and optional) and the approximate weight per piece (please note that any residual oil, liquid gas, water may increase the weight). Refer to the table before the maintenance phase (or refer to the label on the component itself) and choose the most suitable equipment/posture for the work to be carried out, taking into account the load limits load imposed by technical standards and the worker's own health and capacity.



Weight [kg]	Unit model				
	6 kW	9 kW	12 kW	15 kW	18 kW
Compressor	13,7	13,8	25,7	25,5	25,5
Plate heat exchanger	4,8	7,0	7,0	7,0	7,0
Cu-Al heat exchanger battery	6,9	10,7	14,3	22,0	22,0
Liquid receiver	-	-	0,6	0,8	0,8
Liquid separator	-	-	-	-	-
Circulator	1,7	1,7	3,5	3,5	3,5
Deaerator	1,7	1,7	2,2	2,2	2,2
Fan	4,5	4,5	4,5	4,5	4,5
Compressor Driver	2,0	2,0	2,5	2,5	2,5
Electric filter	0,5	0,5	1,5	1,5	1,5
Inductance	1,4	1,4	3,7	3,7	3,7



10. DECOMMISSIONING

Once the unit has reached the end of its life cycle and needs to be replaced, the following operations are recommended:

- The refrigerant has to be recovered by trained personnel and sent to proper collection centres; according to the procedures indicated in Regulation No. 517/2014 on fluorinated greenhouse gases;
- Any antifreeze additives in the water circuit must be recovered and disposed of properly;
- The compressors' lubricating oil has to be collected and sent to proper collection centres;
- The electronic components, such as regulators, driver boards and inverters, must be disassembled and sent to proper collection centres;
- The structure and the different components, if unusable, must be scrapped and divided according to their nature; there is especially a good amount of copper and aluminium in the machine.

These operations allow easy material recovery and the recycling process, thus reducing the environmental impact in accordance with the provisions of Directive 2012/19 / EU on waste electrical and electronic equipment (RAEE).

The user is responsible for the proper disposal of this product, according to national regulations in the country of destination of the appliance. For more information, you should contact the Installation Company or local competent authority.

	An incorrect decommissioning of the appliance may create serious environmental damage and endanger people's safety. Therefore, it is recommended that the unit be disposed only by authorised persons with technical training who have attended training courses acknowledged by the competent authorities.
	It is required to follow the same precautions described in the previous paragraphs.
	Pay special attention during disposal of the refrigerant gas.
	The illegal disposal of the product by the end user leads to the application of the penalties in accordance with the law in the country where the disposal takes place.
	The crossed-out bin symbol applied on the appliance indicates that the product, at the end of its useful life, must be collected separately from other solid/municipal waste. The units are manufactured in accordance with the EC directive on waste of electric/electronic equipment and the harmful effects of incorrect disposal are provided in the user/installer manual. The manufacturing company or its importer/retailer is available to respond to any requests for additional information.

11. RESIDUAL RISKS

The residual risks related to handling, installation and normal operation of the unit are listed below. Any failure by the user and installer to comply with the instructions/indications in the manual (references to which are given in the table) will result in the continuation of these risks, which cannot be eliminated by the manufacturer, who has already taken all the necessary design precautions to ensure that each risk is reduced to a minimum.



Danger	Indication / Instruction	Residual risk	User / Activity				
			Operator			User	
			Transport phase	Installation phase	Maintenance phase	Unit interaction	Normal unit operation
Mechanical: crushing caused by the possible instability of the unit during handling.	The procedures for correct unit handling and installation are indicated on the user-installer manual under chapter 5, with indication of the center of gravity, of the lifting points and equipment. Protection devices use is also recommended as required by current regulations.	Failure by the installer to comply with the installation procedures.	X	X			
Mechanical: crushing caused by the possible instability of the unit.	The procedures for proper unit installation are indicated on user-installer manual under chapter 5.	Failure by the installer to comply with the installation procedures.		X	X		
Mechanical: Cutting / sectioning / shearing caused by the fan not protected against accidental contacts.	The user-installer manual under chapter 9 contains specific warnings, also relating to the routine maintenance phases.	Removal of the protective grille by the user or maintenance technician.			X	X	
Entanglement caused by the fan not protected against accidental contacts.	The user-installer manual under chapter 9 contains specific warnings, also relating to the routine maintenance phases.	Removal of the protection grid by the user or maintenance technician.			X	X	
Mechanical: cutting / abrasion due to contact with the heat exchange coil.	The user-installer manual under chapter 9 contains specific warnings to be taken into consideration when working near the battery.	Failure to observe the warnings in the manual and on the label.			X	X	
Mechanical: slipping / falling caused by ice / water near the unit as a result of water leaks due to bursts pipes or gaskets or from venting of the water-side safety valve in the event of overpressure and failure to convey.	In the user-installer manual under paragraph 5.10 is recommended to pay attention to the conveyance of the water side safety valve and in paragraph 5.4 there are indications regarding the surface on which the unit rests. During maintenance, the use of PPE and the possible removal of all water residues near the machine after intervention is recommended.	Failure to comply with the instructions given in the manual.			X	X	
Mechanical: cut / abrasion caused by the presence of edges on the external casing of the machine and / or screws protruding both outside and inside the unit.	The correct maintenance procedures are indicated in the user-installer manual under chapter 9. Paragraph 4.2 recommends the use of the necessary personal protective equipment.	Failure to comply with the procedures and / or failure to use PPE by the maintenance technician.			X	X	
Mechanical: projection of parts or fluids caused by exceeding the operating pressure limits.	The correct maintenance procedures are indicated in the user-installer manual under chapter 9. Paragraph 4.2 recommends the use of the necessary personal protective equipment.	Simultaneous damage to both types of protection devices.			X	X	
Electrical: electrocution / shock / burn caused by contact with live parts.	The safety measures to be taken in case of maintenance, cleaning or checking of the unit are indicated in the user-installer manual under chapter 9. Any intervention must only be carried out by qualified personnel and with the machine switched off.	Failure to comply with the procedures by the maintenance technician or irresponsible behavior by the user.			X	X	
Electrical: effects on medical implants (pacemakers) caused by electromagnetic phenomena.	The user-installer manual in chapter 3 states the prohibition of direct interaction with the unit by people with electrically controlled medical devices, such as pacemakers. It is recommended to keep a distance from the installation site of the unit as indicated by the medical system used.	Failure to comply with the instructions given in the manual.			X	X	



Danger	Indication / Instruction	Residual risk	User / Activity				
			Operator			User	
			Transport phase	Installation phase	Maintenance phase	Unit interaction	Normal unit operation
Electrical: Fire causes short circuit or electric arcs.	The correct installation procedures are indicated in the user-installer manual under chapter 5. In case of maintenance, the use of the necessary personal protective equipment is recommended.	The possibility of triggering cannot be eliminated but its probability of occurrence is reduced. With the measures taken, the spread of the fire is reduced.			X	X	
Electrical: projection of particles and emission of harmful chemicals as a result of electrical overload.	Chapter 9 in the user-installer manual indicates that maintenance must be carried out with machine off.	Failure to comply with the instructions given in the manual.			X	X	
Thermic: burning / scalding from contact with hot surfaces.	The user-installer manual in chapter 9 indicates the safety measures to be adopted in case of maintenance, cleaning or control of the unit and the personal protective equipment to be equipped.	Failure to comply with the procedures and / or failure to use PPE by the maintenance technician.			X	X	
Caused by noise: Discomfort caused by the noise of the unit during operation.	In the user-installer manual in chapter 5 an environmental impact assessment is requested based on the installation area of the unit, even in the case of installation close to workers.	Failure to observe the actions recommended in the manual and the study of the environmental impact.					X
Cause by vibration: Discomfort caused by unit vibrations during operation.	In the user-installer manual under chapter 5 the use of anti-vibration mounts is recommended.	Failure to observe the actions recommended in the manual and the study of the environmental impact.					X
Caused by radiation: electromagnetic radiation that the unit generates during operation.	-	No one.					X
Generated by materials / substances: infections caused by bacteria potentially present in the carrier fluid (technical water).	The use of personal protective equipment is recommended in the user-installer manual under paragraph 4.2. The safety data sheet for the refrigerant (paragraph 4.5) and specific warnings (paragraph 4.6) are also shown.	Failure to comply with the procedures by the maintenance technician.			X	X	
Generated by materials / substances: fire / explosion causes gas classified as flammable.	The user-installer manual under chapter 5 contains specific indications about unit installation place and protection devices.	Failure to comply with the indications relating to the place of installation and adequate maintenance procedures			X		X
Generated by materials / substances: infections caused by bacteria potentially present in the carrier fluid (technical water).	The permitted uses of the unit are listed in the user-installer manual under chapter 3.	Failure to comply with the instructions given in the manual.			X		X
Generated by materials / substances: burn caused by the presence of R290 dissolved in oil inside the refrigeration circuit, triggered by a flame welding torch.	The use of personal protective equipment is recommended in the user-installer manual under paragraph 4.2. Under chapter 9 it is advisable, in the case of maintenance that involves desoldering the tubes, to proceed with cutting them, as the flame of the torch for desoldering triggers any oil present.	Failure to comply with the instructions given in the manual.			X		
Generated by materials / substances: burn / scald from escaping refrigerant.	The safety measures to be adopted in case of maintenance, cleaning or control of the unit and the personal protective equipment to be equipped are indicated in the user-installer manual under chapter 9.	Failure to comply with the instructions given in the manual.			X		X
Generated by materials / substances: pollution due to inappropriate disposal.	The instructions for correct disposal are given in the user-installer manual under chapter 10.	Failure to comply with the instructions given in the manual.					



Danger	Indication / Instruction	Residual risk	User / Activity				
			Operator			User	
			Transport phase	Installation phase	Maintenance phase	Unit interaction	Normal unit operation
Ergonomic: fatigue / musculoskeletal disorders caused by exertion during maintenance / installation.	Under paragraph 4.1, the user-installer manual recommends compliance with current regulations (international and local) regarding workers health and safety. During maintenance, it is advisable to keep a posture that does not cause fatigue and to check the weight of the component before proceeding with its handling (paragraph 9.3).	Failure to comply with the instructions given in the manual.		X	X		
Generated by unit use environment: Slipping / falling caused by ice / water near the unit due to condensate drain / defrost.	Under paragraph 5.10.4 the user-installer manual indicates about condensate drain system, recommending that you pay attention to the danger of slipping	Failure to comply with the instructions given in the manual.			X	X	
Generated by unit use environment: unexpected events as a result of malfunctions due to water / snow / humidity.	In the user-installer manual under chapter 9 it is recommended to pay attention to the correct positioning of the electrical power cables in the respective cable glands of the user board case and to the reassembly of all the sheets, in particular those of the electrical panel, in order to maintain the degree of declared protection.	Failure to comply with the procedures by the maintenance technician.			X	X	
Generated by unit use environment: lightning that can potentially hit the unit.	In the user-installer manual under chapter 9 it is recommended to carry out maintenance only in weather conditions suitable for the operations envisaged. It is also indicated that the installation site must be sufficiently far from lightning rods or objects that could attract the lightning (par. 5.4). The unit must be electrically connected to a system that complies with the regulations in force.	Failure to comply with the instructions given in the manual.			X	X	
Generated by unit use environment: electromagnetic disturbances caused by interference between devices placed near the machine and the machine itself.	In the user-installer manual under paragraph 5.12 is recommended to power the unit via a dedicated line and protections. It is also recommended to use an independent cable duct in order to remove the possibility of interaction with other devices.	Failure to comply with the recommendations regarding the electrical system.					X
Generated by unit use environment: possibility of breakage of components / supports caused by corrosion and oxidation.	The user-installer manual under chapter 9 contains specific warnings on maintenance and cleaning to be carried out on the surfaces of the sheets and heat exchange coils. The technical bulletin provides advice on the treatments to choose based on the environmental conditions.	Failure to comply with cleaning and maintenance and / or incorrect assessment of the atmospheric agents that characterize the installation site.			X	X	



12. TECHNICAL DATA

12.1 TECHNICAL DATA SHEET UNIT

TECHNICAL CHARACTERISTICS		Unit of measurement	SHP290		
			6 kW	9 kW	12 kW
Cooling	Cooling capacity (1) min/nom/max	kW	2,10 / 5,43 / 5,78*	3,27 / 8,57 / 9,20*	4,20 / 10,67 / 11,21*
	Input power (1)	kW	1,95	2,77	3,75
	EER (1)	W/W	2,79	3,09	2,85
	Cooling capacity (2) min/nom/max	kW	3,29 / 5,62 / 6,19*	4,88 / 9,15 / 9,89*	6,30 / 12,57 / 13,25*
	Input power (2)	kW	1,25	1,93	2,83
	EER (2)	W/W	4,48	4,75	4,44
	SEER (5)	W/W	4,77	5,41	4,72
	Water flow rate (1)	L/s	0,26	0,40	0,49
	User side heat exchanger pressure drops (1)	kPa	7,8	5,1	7,5
	Nominal useful head (1)	kPa	65,7	57,3	81,2
Heating	Heating capacity (3) min/nom/max	kW	2,97 / 6,24 / 6,86*	4,12 / 9,69 / 10,42*	5,99 / 12,6 / 13,7*
	Input power (3)	kW	1,31	2,05	2,61
	COP (3)	W/W	4,76	4,72	4,83
	Heating capacity (4) min/nom/max	kW	2,74 / 5,97 / 6,42*	3,63 / 9,10 / 9,75*	5,26 / 11,61 / 12,77*
	Input power (4)	kW	1,91	2,85	3,60
	COP (4)	W/W	3,12	3,20	3,22
	Heating capacity (11) min/nom/max	kW	2,62 / 5,87 / 6,41*	3,36 / 9,05 / 9,81*	4,93 / 12,04 / 13,08*
	Input power (11)	kW	2,29	3,40	4,60
	COP (11)	W/W	2,57	2,66	2,62
	SCOP (6)	W/W	4,74	5,19	4,88
	Water flow rate (3)	L/s	0,29	0,44	0,58
	User side heat exchanger drops (3)	kPa	9,6	6,2	10,5
	Nominal useful head (3)	kPa	63,6	52,8	79,5
	Energy efficiency water 35°C / 55°C	Class	A+++/A++	A+++/A+++	A+++/A++
	Compressor	Type		Twin Rotary DC Inverter	
Refrigerant oil (type)		A	PZ46M	PZ46M	PZ46M
Number of compressors		n°	1	1	1
Oil charge (quantity)		L	0,45	0,52	0,90
Refrigerant	Type		R290		
	Refrigerant charge (7)	kg	0,43	0,75	1,00
	Amount of refrigerant in equivalent CO2 tonnes (7)	ton	0,000	0,000	0,000
	Design pressure (high/low) heat pump mode	bar	30,3/0,3	30,3/0,3	30,3/0,3
Design pressure (high/low) chiller mode	bar	30,3/2	30,3/2	30,3/2	
Fans	Type		Brushless DC motor		
	Number	n°	1	1	2
Internal heat exchanger	Internal heat exchanger type		Plates		
	N° internal heat exchangers	n°	1	1	1
	Water content	L	0,94	1,69	1,69
Hydraulic circuit	Water content of hydronic circuit	L	2,2	2,2	3,7
	Maximum water side pressure	bar	3	3	3
	Plumbing fittings	inch	G1"	G1"	G1"
	Minimum water volume (8)	L	65	95	125
	Maximum circulator output	kW	0,095	0,095	0,14
	Maximum circulator absorbed current	A	0,7	0,7	1,2
Noise level	Sound power level Lw (9)	dB(A)	57	58	59
	Sound pressure at 1m distance Lp1 (10)	dB(A)	42	43	44
	Sound pressure at 10m distance Lp10 (10)	dB(A)	26	27	28
Electrical data	Power supply		230V/1/50Hz		
	Maximum input power	kW	2,9	4,4	5,1
	Maximum input current	A	14,4	21,4	25,8
	Maximum input power with antifreeze kit	kW	3,0	4,6	5,3
	Maximum input current with antifreeze kit	A	15,0	22,0	26,4



TECHINICAL CHARACTERISTICS		Unit of measurement	SHP290		
			15 kW	18 kW	
Cooling	Cooling capacity (1) min/nom/max	kW	5,11 / 12,41 / 13,47*	5,11 / 13,75 / 14,33*	
	Input power (1)	kW	3,71	4,34	
	EER (1)	W/W	3,35	3,16	
	Cooling capacity (2) min/nom/max	kW	7,86 / 12,9 / 14,40*	7,90 / 13,94 / 14,79*	
	Input power (2)	kW	2,40	2,69	
	EER (2)	W/W	5,37	5,18	
	SEER (5)	W/W	5,02	5,04	
	Water flow rate (1)	L/s	0,57	0,66	
	User side heat exchanger pressure drops (1)	kPa	11,7	16,0	
	Nominal useful head (1)	kPa	79,7	73,5	
Heating	Heating capacity (3) min/nom/max	kW	7,17 / 16,33 / 17,69*	7,21 / 18,72 / 19,84*	
	Input power (3)	kW	3,30	4,05	
	COP (3)	W/W	4,94	4,62	
	Heating capacity (4) min/nom/max	kW	6,58 / 15,23 / 16,64*	6,60 / 17,38 / 18,65*	
	Input power (4)	kW	4,52	5,32	
	COP (4)	W/W	3,37	3,27	
	Heating capacity (11) min/nom/max	kW	6,20 / 14,65 / 15,94*	6,15 / 16,65 / 17,73*	
	Input power (11)	kW	5,17	6,04	
	COP (11)	W/W	2,83	2,76	
	SCOP (6)	W/W	4,85	4,76	
	Water flow rate (3)	L/s	0,78	0,87	
	User side heat exchanger pressure drops (3)	kPa	22,0	27,8	
	Nominal useful head (3)	kPa	66,8	59,8	
	Energy efficiency water 35°C / 55°C	Class	A+++/A++	A+++/A++	
	Compressor	Type		Twin Rotary DC Inverter	
		Refrigerant oil (type)	A	PZ46M	PZ46M
Number of compressors		n°	1	1	
Oil charge (quantity)		L	0,9	0,9	
Refrigerant	Type		R290		
	Refrigerant charge (7)	kg	1,27	1,27	
	Amount of refrigerant in equivalent CO2 tonnes (7)	ton	0,000	0,000	
	Design pressure (high/low) heat pump mode	bar	30,3/0,3	30,3/0,3	
Design pressure (high/low) chiler mode	bar	30,3/2	30,3/2		
Fans	Type		Brushless DC motor		
	Number	n°	2	2	
Internal heat exchanger	Internal heat exchanger		Plates		
	N° internal heat exchanger	n°	1	1	
Hydraulic circuit	Water content	L	1,69	1,69	
	Water content of hydronic circuit	L	3,7	3,7	
	Maximum water side pressure	bar	3	3	
	Plumbing fittings	inch	G1"	G1"	
	Minimum water volume (8)	L	155	155	
	Maximum circulator output	kW	0,14	0,14	
Noise level	Maximum circulator absorbed current	A	1,2	1,2	
	Sound power level Lw (9)	dB(A)	62	62	
	Sound pressure at 1m distance Lp1 (10)	dB(A)	47	47	
	Sound pressure at 10m distance Lp10 (10)	dB(A)	31	31	
Electrical data	Power supply		400V/3/50Hz		
	Maximum input power	kW	7,7	8,2	
	Maximum input current	A	15,8	16,5	
	Maximum input power with antifreeze kit	kW	7,9	8,3	
Maximum input current with antifreeze kit	mm	16,4	17,1		



Performance referring to the following conditions, according to standard UNI EN 14511:2022:

- (1) Cooling: outdoor air temperature 35°C; in/out water temperature 12/7°C.
 - (2) Cooling: outdoor air temperature 35°C; in/out water temperature 23/18°C.
 - (3) Heating: outdoor air temperature 7°C db 6°C db; in/out water temp 30/35°C.
 - (4) Heating: outdoor air temperature 7°C db 6°C db; in/out water temp 40/45°C.
 - (5) Cooling: in/out water temperature 7/12°C.
 - (6) Heating: average climatic conditions; T_{biv}=-7°C; temp.acqua ing./usc. 30/35°C.
 - (7) Indicative data subject to changes. For the correct value, always refer to the technical label on the unit.
 - (8) Calculated for a decrease in system water temperature of 20°C with a defrost cycle lasting 6 minutes.
 - (9) Sound mode: heating mode according to EN 12102:2022 Annex A; value determined on the basis of measurements made in accordance with UNI EN ISO 9614-1, in compliance with Eurovent certification requirements.
 - (10) Sound pressure: value calculated from the sound power level in condition (9) using the standard UNI EN ISO 3744:2010.
 - (11) Heating: outdoor air temperature 7 °C b.s. 6 °C b.u.; inlet/outlet water temp. 55/65 °C.
- (*) activating the maximum Hz function.

N.B. performance data are indicative and are subject to change. Furthermore the performance declared in points (1), (2), (3) and (4) is intended to refer to instantaneous power according to EN 14511:2022. The value declared in point (5) and (6) is determined according to UNI EN 148252022.

12.2 UNIT AND AUXILIARY ELECTRICAL DATA

Unit power supply (*)	V/~/Hz	230/1PH+PE/50
Unit power supply (**)	V/~/Hz	400/3PH+PE/50
On board controller circuit	V/~/Hz	12/1/50
Remote controller circuit	V/~/Hz	12/1/50
Fans power supply	V/~/Hz	230/1/50

(*) For sizes 0106, 0109, 0112 - (**) For sizes 0115, 0118.

NOTE: The electrical data are subject to change due to updates. It is therefore always necessary to refer to the technical specifications label applied on the right side panel of the unit.

13. OPERATING LIMITS

13.1 EVAPORATOR WATER FLOW RATE

The nominal water flow rate refers to a 5°C temperature difference between the evaporator inlet and outlet. The maximum permitted flow rate features a 3°C temperature difference while the minimum one has an 8°C (in cooling mode) temperature difference at the nominal conditions as shown in the technical sheet. The maximum permissible temperature difference, however, is 10 °C when the heat pump is operating in heating mode.



Insufficient water flow rates can cause excessively low evaporation temperatures causing the safety devices to trigger and stopping the unit and, in some extreme cases, forming ice in the evaporator and resulting in serious failures to the cooling circuit.

For greater details, we have attached a table below with the minimum flow rates for the plate heat exchanger to guarantee proper operation according to the model (please note: the water flow switch is applied to protect against failed triggering of the antifreeze probe due to the lack of flow but does not guarantee the minimum water flow rate required for correct operation of the unit).

Model SHP290	Chiller mode				
	6 kW	9 kW	12 kW	15 kW	18 kW
Minimum water flow to be assured in chiller mode (condition (1) technical sheet) [l/s]	0,16	0,26	0,32	0,37	0,41
Maximum water flow to be assured in chiller mode (condition (1) technical sheet) [l/s]	0,43	0,68	0,85	0,99	1,09
Flowmeter intervention flow [l/s]	0,100	0,133	0,167	0,200	0,250



Pay attention to the pressure levels of the hydraulic system: too low values can cause malfunctioning of the unit.

For very low pressure values in the hydraulic system, the flowmeter may show an unstable reading, so it is advisable to have an automatic loading system or a pressure monitoring system. It is good practice to periodically vent the system, especially if very high temperature differences are read between the inlet and outlet on the water side, as this could be a symptom of air bubbles in the circuit that reduce the available water flow rate.

13.2 COOLING WATER PRODUCTION (SUMMER MODE)

The minimum permissible temperature at the evaporator outlet is 5°C. For lower temperatures, contact our technical department. In this case, contact our technical department for a feasibility study and evaluation of the modifications to be made according to the requirements. The maximum temperature that can be maintained at steady state at the evaporator outlet is 20°C.



13.3 HEATING WATER PRODUCTION (WINTER MODE)

When the system has reached steady state, the water outlet temperature must not drop below 22°C: lower values, not due to transient phases or reaching steady-state, can cause system failures and could possibly break the compressor. The maximum outlet water temperature must not exceed 75°C.

There could be failures to the regular operation of the unit or, in more critical cases, the safety devices could be triggered due to temperatures higher than those indicated, especially if coupled with reduced water flow rates.

13.4 AMBIENT AIR TEMPERATURE AND SUMMERY TABLE


The units are designed and built to operate in summer mode, with condensation control, at outdoor air temperatures between -10°C and +46°C. In heat pump mode, the allowed temperature range of the outdoor air is from -20°C to 20°C depending on the outlet water temperature as shown in the table below.

Operating limits

Water chiller mode		
Room temperature	Minimum + 10°C	Maximum +46°C
Outlet water temperature	Minimum +5°C	Maximum +20°C
Heat pump mode		
Room temperature	Minimum -20 °C	Maximum +20°C
Outlet water temperature	Minimum +22 °C	Maximum +75 °C
Heat pump mode for domestic hot water		
Room temperature with water at maximum 39°C	Minimum -20 °C	Maximum +43 °C
Room temperature with water at maximum 55°C	Minimum -20 °C	Maximum +43 °C
Outlet water temperature	Minimum +22 °C	Maximum +75 °C


Below are the graphed operating limits for heating, cooling and domestic hot water production. Please note that operating the unit outside the operating limits given causes blocking alarms that lead to the product shutting down, with possible damage to components and/or safety organs.

HEAT PUMP MODE

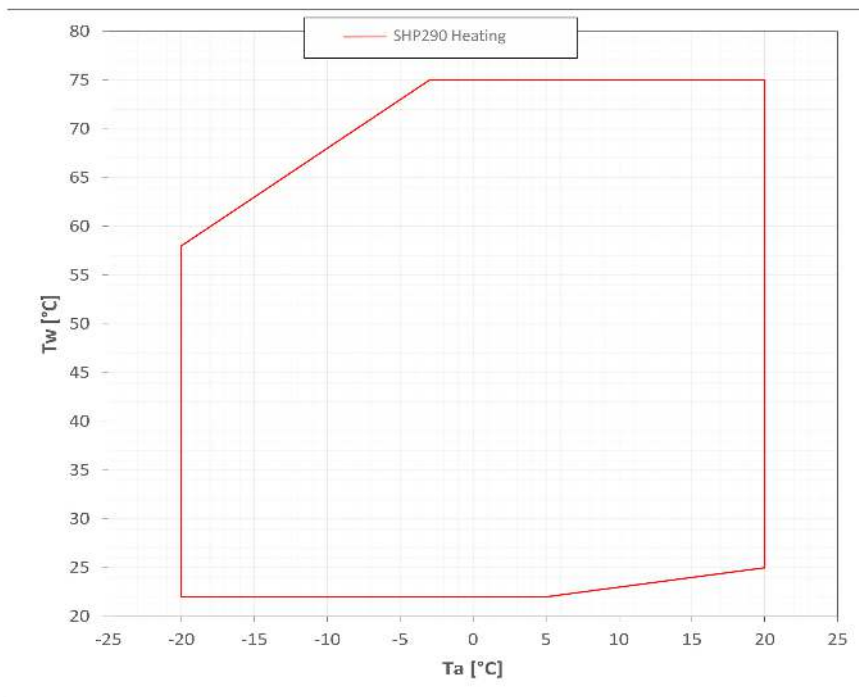




COOLING MODE

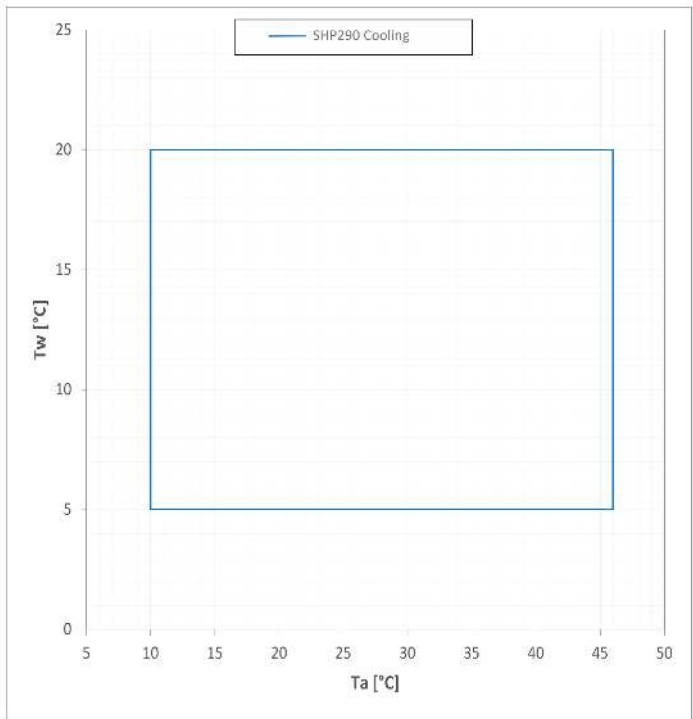

DOMESTIC HOT WATER MODE

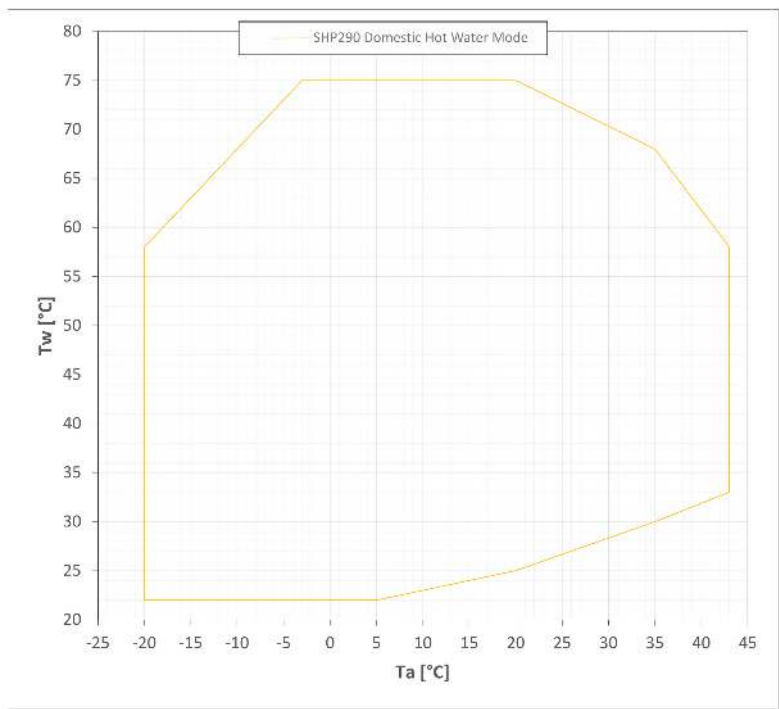



14. TROUBLESHOOTING

Error Code	Description	What blocks	Cause	What you have to check	What you have to do
E00	Remote ON/OFF	MACHINE	Open contact C/ID3	Verify that parameter H47=2 and polarity H75=0	Close digital input C/ID3
E001	High pressure alarm	MACHINE	The pressure transducer detects a pressure higher than the set pressure (30.3 bar)	Check that the reading is correct with a pressure gauge placed on the high-pressure charging port, for location see chapter 5.9 of the manual	If the reading is not correct, replace the high-pressure transducer
			It resets when the pressure drops below 22.8 bar	If the alarm occurs in chiller mode: check that there is no recirculation of air such as to increase the inlet temperature to the coil beyond the permissible limits	Check that the minimum permitted spaces are correctly observed, see MUI manual
			If the alarm occurs more than 3 times in one hour, the reset becomes manual (switch the unit off and on again)	If the alarm occurs in chiller mode, check that the exchange coil is not obstructed	Clean the exchange battery accurately, see chapter in the manual
				If the alarm occurs in heating mode, check that the EEV valve is functioning correctly	- Check the correct connection of connector CN6 - Replace EEV coil, if alarm reoccurs replace EEV valve assembly
			If the alarm occurs in cooling mode, check that the fan is working properly	Use a multimeter to check for the presence of 230 V voltage at the terminals of the CN-FPW1(12) connector on the control panel. In units with double fans, also check the CNFPW2(14) connector	
E002	Low pressure alarm	MACHINE	The pressure transducer detects a pressure below the set pressure. In cooling mode 2 bar and in heating mode 0,3 bar	Check for leaks with the leakage detector or by other means	Recover the remaining refrigerant, repair the leak if possible and restore the charge by checking the data in the technical label
			It resets when the pressure rises above 4 bar in cooling and 2.3 bar in heating	Check that the reading is correct with a pressure gauge placed on the low-pressure charge port, for location see chapter 5.9 of the manual	If the reading is not correct, replace the low-pressure transducer
			If the alarm occurs more than 3 times in one hour, the reset becomes manual (switch the unit off and on again)	If the alarm occurs in cooling mode, check that the EEV valve is functioning properly	- Check the correct connection of connector CN6 - Replace EEV coil, if alarm reoccurs replace EEV valve assembly
				If the alarm occurs in heating mode, check that the fan is functioning properly	Use a multimeter to check for the presence of 230 V voltage at the terminals of the CN-FPW1(12) connector on the control panel. In units with double fans, also check connector CNFPW2(14)
E005	Antifreeze alarm	MACHINE	The outlet water temperature is below the minimum allowed (3°C) - in cooling mode the alarm is immediate while in heating mode it is active after 2 min: the alarm resets when the temperature returns to a value above 6°C	The temperature probe is correctly inserted in the outlet water well	Check the correct installation of the probe and any insulation
				In the system, antifreeze was used, but the value of A08 was not adjusted according to the concentration and the new freezing point	Check antifreeze concentration and adjust A08 accordingly
				Check the set point, the water flow rate and if the temperature difference in cooling mode is higher than the maximum allowed	Raising the set point and/or water gate
			The outlet water temperature probe is out of calibration and measures a lower value than the actual value	Check the correct temperature with a reference thermometer	Replace the temperature probe



Error Code	Description	What blocks	Cause	What you have to check	What you have to do
E006	Flow alarm	MACHINE	The flowmeter is bypassed by the control for a time equal to 10 seconds from the start of the machine, after the bypass time has expired the status of the digital input is evaluated, if it is active the presence of flow is considered. If a lack of flow is diagnosed for a time of 5 seconds, the alarm is activated for 120 seconds. If the alarm occurs more than 3 times per hour, the reset becomes manual	Check system pressure	<p>If air is present in the hydraulic system, vent by performing the function.</p> <p>With the machine in OFF, once the password (at least the installer's) has been entered and confirmed (the word "PSS" reappears), pressing keys T3 and T4 simultaneously for 3 seconds activates the system bleed function, which consists of activating the use pump for 5 minutes.</p> <p>During this phase, the pump cycles between maximum and minimum speed for a duration of 1 minute. SFIA" appears on the display.</p> <p>By pressing keys T3 and T4 again for 3 seconds, the procedure can be interrupted (note that in any case the pump performs post-pumping)</p>
				Check CNP(04) connector and electrical connection integrity	Restore connection as per circuit diagram and/or replace connector
				Check that there are no water leaks in the heat pump hydraulic circuit	Reset the hydraulic circuit and/or replace the flowmeter
E008	Compressor driver limitation alarm	MACHINE	If during the lubrication phase the compressors do not exceed the minimum frequency, the compressor is stopped and alarm E008 is displayed. This alarm is reset when all compressors are stopped. If the alarm occurs more than 3 times in one hour, the reset becomes manual	Check the correct functioning of the fan; if not functioning, check the presence of 230 V on the terminals of the CNFPW1 connector on the switchboard	Restore connection as per circuit diagram and/or replace fan
				Check the impedance between the compressor phases:	If it is different from the previous values, replace the compressor
				Coil resistance at 20°C	
				0106 = 0,45Ω	
				0109 = 0,17Ω	
				0112 = 0,15Ω	
				0115 = 0,26Ω	
				0118 = 0,26Ω	
				0121 = 0,29 Ω	
0123 = 0,29 Ω					
0125 = 0,17 Ω					
0127 = 0,17 Ω					
E009	High compressor discharge temperature alarm	COMPRESSOR	If the compressor discharge temperature exceeds the value set by parameter 120°C for 30 seconds, the alarm is activated and the compressor is blocked. The alarm is automatically reset when the discharge temperature falls below the 110°C limit again	Check that the reading is correct with a pressure gauge placed on the high-pressure charging port, for location see chapter 5.9 of the manual	Restore gas charge
				Check the wiring of the exhaust sensor, and that the bulb is correctly inserted in the thermowell with the presence of thermodissipating paste. Check the CNFM panel connector connection (TE DT1)	Restore connection as indicated in circuit diagram and/or replace probe connector
E018	High temperature alarm in cooling mode	MACHINE	If the control probe has a value above 48°C for more than 50 seconds, the alarm is active. It is disabled if the temperature is below 45°C	Check that the installation rules described in the SHP290 manual have been followed	Comply with the installation notes



Error Code	Description	What blocks	Cause	What you have to check	What you have to do
E020	Pressure transducer alarm	MACHINE	<p>If the compressors have been running for more than 180 seconds, and the suction pressure transducer measures a higher pressure than the condensing pressure transducer, or if the transducers are reversed, alarm E020 is reported.</p> <p>This alarm is not resettable (switch off the unit to clear the alarm)</p>	Check that the reading is correct with a pressure gauge placed on the high-pressure charge port, for location see chapter 5.9 of the manual	Reset the gas charge and/or replace the pressure transducers
				Check the impedance between the compressor phases:	<p>If it is different from the previous values, replace the compressor</p>
				Coil resistance at 20°C	
				0106 = 0,45Ω	
				0109 = 0,17Ω	
				0112 = 0,15Ω	
				0115 = 0,26Ω	
				0118 = 0,26Ω	
				0121 = 0,29 Ω	
0123 = 0,29 Ω					
0125 = 0,17 Ω					
0127= 0,17 Ω					
E041	Inconsistent temperature alarm	MACHINE	<p>If the water inlet and outlet probes are reversed. This alarm monitors the correctness of the temperature difference on the utilisation exchanger and intervenes when there is a problem with the reversing valve</p>	Check the positioning of the water inlet and outlet probes	Restore connection as in circuit diagram and/or replace probe connector
E101	Slave1 communication timeout (Active with optional Gi module)	MACHINE	<p>If there is no communication between master and slave boards, an alarm is triggered after 10 seconds. The alarm is automatically reset</p>	Check the connection in terminals 2A/2B/2C of the user card	<p>H23÷H33=0, H55÷H64=0, H86÷H92=0, H105=0, H106=0, H111=0, H112=0, H118=0, H119=0</p>
				in case the GI or GI3 tab is not present, check that the following parameters, if visible, are at 0	



SHP290 Air to Water Heat Pumps

Error Code	Description	What blocks	Cause	What you have to check	What you have to do	
E611	Water inlet probe failure	MACHINE	The probe connected to the TE IN1 input is faulty	Check the wiring of the exhaust probe, and that the bulb is correctly inserted in the thermowell with the presence of thermodissipating paste. Check the connection of the panel connector CNTP(04) pin 1/2	Change probes with replacement kit	
E621	Water outlet probe failure	MACHINE	The probe connected to the TE OUT1 input is faulty	Check the wiring of the exhaust probe, and that the bulb is correctly inserted in the thermowell with the presence of thermodissipating paste. Check the connection of the panel connector CNTP(04) pin 3/4		
E631	Compressor suction probe failure	MACHINE	The probe connected to the TE SD1 input is faulty	Check the wiring of the exhaust probe, and that the bulb is correctly inserted in the thermowell with the presence of thermodissipating paste. Check the connection of the panel connector CNTP(04) pin 5/6		
E641	Compressor discharge probe failure	MACHINE	The probe connected to the -TE DT1 input is faulty	Check the wiring of the exhaust probe, and that the bulb is correctly inserted in the thermowell with the presence of thermodissipating paste. Check the connection of the panel connector CNTP pin 7/8		
	High pressure switch intervention	MACHINE	High pressure switch intervention	Check continuity between the pins of the CNTS connector and the CN-PSH connector. Check that the pressure reading is correct with a pressure gauge placed on the high-pressure charge port, for location see chapter 5.9 of the manual		
E651	Outside air probe failure	MACHINE	The probe connected to input ST5 is faulty	Check the wiring of the exhaust probe, and that the bulb is correctly inserted in the thermowell with the presence of thermodissipating paste. Check the connection of the pin 9/10 CNTP(04) panel connector		
E671	System remote probe failure	FUNCTION	The probe connected to input SAS2 is faulty	Check that the SAS2 probe is securely attached to terminals AI7-C		
E681	Sanitary probe failure	FUNCTION	The probe connected to input SAS1 is faulty	Check that the SAS1 probe is securely attached to terminals AI7-C		
E641	Compressor discharge probe failure	MACHINE	The probe connected to the -TE DT1 input is faulty	Check the wiring of the exhaust probe, and that the bulb is correctly inserted in the thermowell with the presence of thermodissipating paste. Check the connection of the panel connector CNTP pin 7/8		Operate by connecting the connectors in series, as shown in the circuit diagram
	High pressure switch intervention	MACHINE	High pressure switch intervention	Check continuity between pins of CNTS connector and CN-PSH connector		
E641	High pressure switch intervention	MACHINE	High pressure switch intervention	Check that the reading is correct with a pressure gauge placed on the high-pressure charge port, for location see chapter 5.9 of the manual	If the reading is not correct, replace the high-pressure switch	
	Low pressure transducer failure	MACHINE	The transducer connected to input TRL1 is faulty	Check that the TRL1 transducer is securely attached to the CNTR connector	Change the transducer	
E701	High pressure transducer failure	MACHINE	The transducer connected to input TRH1 is faulty	Check that the TRH1 transducer is securely attached to the CNTR connector	Change the transducer	
E801 (*)	Inverter timeout	MACHINE	The compressor driver is not communicating correctly with the on-board control	Check the wiring of control board connector CN15 inside the control cabinet and check the connection (a,b and gnd) to the inverter	Operate by connecting the connectors in series, as shown in the circuit diagram	
				Check that the on-board control functions properly -CNTR1	Replace on-board machine control -CNTR1	
				Check that the inverter is working properly -CNTR2	Replace the inverter	



Error Code	Description	What blocks	Cause	What you have to check	What you have to do
E851(*)	Inverter hardware problem	MACHINE	Defective inverter, inductance or compressor. Missing connection between inverter and compressor	Check the continuity of the connection between U, V and W of the inverter and U, V, W of the compressor.	Restore connection as in circuit diagram
				Check the connection of inductance L1	Restore connection as in circuit diagram
				Check the impedance between the compressor phases:	If it is different from the previous values, replace the compressor
				Coil resistance at 20°C	
				0106 = 0,45Ω	
				0109 = 0,17Ω	
				0112 = 0,15Ω	
				0115 = 0,26Ω	
				0118 = 0,26Ω	
0121 = 0,29 Ω					
0123 = 0,29 Ω					
0125 = 0,17 Ω					
0127 = 0,17 Ω					
E 861	Engine power too high	MACHINE	IPM (Intelligent Power Module) thermal protection (100-125°C) Ambient temperature too high	Check whether dirt has accumulated in the inverter heat sink	Clean the inverter heat sink
			Output short circuit (line to line, line to earth)	If the error appears when starting the compressor	Replace the driver
			Disconnect the wires connected in terminals U, V and W on the compressor inverter and check that the wires are not short-circuited	If the silos are short-circuited, change the compressor	
E 871	Room over-temperature protection	MACHINE	The ambient temperature is too high	Check whether dirt has accumulated in the inverter heat sink	Clean the inverter heat sink
	Heat sink over heat protection		Defective sensors	If the ambient temperature is below 70°C and the error persists	Replace the driver
E 881	Supply voltage out of limit	MACHINE	A temporary loss of power occurred	Switch the unit off, wait 2 minutes and then switch it on again	Check that the mains voltage complies with the technical label
			Power supply voltage fluctuations are too high	Check that the mains voltage complies with the technical label	If the voltage is met and the error persists, replace the driver
E 891	Compressor not connected to the power supply	MACHINE	Output phase loss One or more leaky wires are not connected	Check compressor cable connection, in terminals U, V and W	Restore connection as in circuit diagram
E 901	Wrong compressor inverter	MACHINE	Compressor model does not match the inverter board	Check the installed spare part	Order the correct inverter
				Reload factory parameters	Replace the driver
E911	Overload protection	MACHINE	The output current exceeds the overload capacity of the driver. Compressor load is excessive. Compressor rotor blocked or magnet deteriorated	Check the continuity of the connection between U, V and W of the inverter and U, V, W of the compressor.	Replace compressor wiring
				Check the impedance between the compressor phases:	If it is different from the previous values, replace the compressor
				Coil resistance at 20°C	
				0106 = 0,45Ω	
				0109 = 0,17Ω	
				0112 = 0,15Ω	
				0115 = 0,26Ω	
				0118 = 0,26Ω	
				0121 = 0,29 Ω	
0123 = 0,29 Ω					
0125 = 0,17 Ω					
0127 = 0,17 Ω					



Error Code	Description	What blocks	Cause	What you have to check	What you have to do
E921	PFC converter overcurrent	MACHINE	Input ordering circuit	Check compressor inverter input power supply	Restore connection as in circuit diagram
			PFC converter overcurrent	Check connection to inductance L1	Restore connection as in circuit diagram
				Check the impedance between the compressor phases:	If it is different from the previous values, replace the compressor
				Coil resistance at 20°C	
				0106 = 0,45Ω	
				0109 = 0,17Ω	
				0112 = 0,15Ω	
				0115 = 0,26Ω	
				0118 = 0,26Ω	
				0121 = 0,29 Ω	
				0123 = 0,29 Ω	
0125 = 0,17 Ω					
0127 = 0,17 Ω					
E931	Communication error with main controller	MACHINE	Modbus communication loss	Check the communication wiring between inverter and control board	c
E941	PFC converter failure	MACHINE	Input phase loss	Check that the mains voltage complies with the technical label	If the voltage is met and the error persists, replace the driver
E951	Temperature sink - environmental sensor error	MACHINE	Damaged temperature sensor cable	Check the wiring of the heat sink temperature sensor	Replacing the compressor inverter
E961	Abnormal conditions	MACHINE	The output current of the driver or the temperature of the incoming mail/heat sink exceeds the protection limit for a long time	Switch the unit off, wait 2 minutes and then switch it on again	Replacing the compressor inverter
				Check that the mains voltage complies with the technical label	Replacing the compressor inverter
			The output current exceeds the overload capacity of the driver. Compressor load is excessive. Compressor rotor blocked or magnet deteriorated	Check the impedance between the compressor phases:	If it is different from the previous values, replace the compressor
				Coil resistance at 20°C	
				0106 = 0,45Ω	
				0109 = 0,17Ω	
				0112 = 0,15Ω	
				0115 = 0,26Ω	
				0118 = 0,26Ω	
				0121 = 0,29 Ω	
				0123 = 0,29 Ω	
0125 = 0,17 Ω					
0127 = 0,17 Ω					
E971	EEPROM not initialised	MACHINE	Damaged driver memory		Replacing the compressor inverter





SAPPHIRE HEAT SOLUTIONS
5 Howard Road, Eaton Socon,
St Neots, Cambs, PE19 8ET
01480 477066
sales@sapphireheatsolutions.co.uk
www.sapphireheatsolutions.co.uk